

SIDEWINDER™ Reese Titan WEDGE
INSTALLATION INSTRUCTIONS 30865IN

1. Verify the part number with shipping paper work. Verify that the wedge is named for your 5th wheel hitch head or you have the universal wedge.
2. Verify that you also have two (2) 5/8 bolts and two (2) 5/8 lock washers.
3. Remove any lube plate used on the hitch and pin box. This will allow full engagement of wedge Against opening of Titan Hitch. (The need for a lube plate is NOT needed because pin box does not rotate on hitch)
4. With the truck unhooked from the unit bolt the wedge to the Sidewinder. The wedge needs to be positioned with the narrow end towards the front of the unit and the recessed area downward. The recessed area is for socket head clearance to the bolts. Install bolts hand tight including the lock washers, then slide the wedge to the rear most position of the slots.



Caution DO NOT position yourself or others under the trailer kingpin area or between the truck and trailer during coupling or uncoupling. Serious injury or death may occur.

If it is necessary to put any part of your body under the trailer or between the truck and trailer:

- **All tires MUST be blocked in front and behind AND**
 - **Trailer landing gear MUST be resting on firm ground AND**
 - **Truck MUST be stationary, in park, with emergency brake on**
5. Hook the truck to the unit. **Back straight into the Sidewinder.** Make sure hitch jaws close. Pull forward slightly to align truck, Sidewinder and 5th wheel in a straight position. Set brakes, turn off truck and lower trailer landing gear to the ground
 6. Slide wedge forward to make contact in to the 5th wheel hitch head. A slight tapping on the rear of the wedge with a hammer may help with this step.
 7. Torque the wedge bolts to 160 ft. lbs.
 8. Unhook the truck from the unit. Apply a small amount of grease to sides of the wedge block. This will allow a much easier hook-up.
 9. Connect the Sidewinder to your hitch in back of the truck making sure hitch jaws close. **Back straight into Sidewinder. Caution DO NOT position yourself or others under the trailer kingpin area during coupling or uncoupling. Serious injury or death may occur.**
 10. Sidewinder will be hard to turn by hand until it has at least 500 miles on unit.

Cequent Performance Products
47912 Halyard Dr. Suite 100
Plymouth, MI 48170
Phone 800-632-3290
www.cequentgroup.com