



**OVER 35 YEARS OF INNOVATION, QUALITY, SAFETY.
IMPORTANT OWNER-OPERATOR INSTALLATION INSTRUCTIONS**

Part # C1211

Owner's Manual



Version 11 BY: CW 5-3-2022

TECH SUPPORT (800) 246-8132

**AFTER INSTALL, PLEASE GIVE
THIS BOOKLET TO YOUR CUSTOMER**

Hitch Weight Capacity

Weight Carry

 
 
 
17,000 lbs maximum pull weight
1,700 lbs maximum tongue weight


Weight Distribution

20,000 lbs maximum pull weight
2,000 lbs maximum tongue weight.

Warning

Do not exceed the factory weight ratings of
your vehicle


Parts Inventory			
Item Image	Item Description	Item #	QTY
	Double Receiver Cross Tube	SH-20K-CT-A5	1
	Driver Side Plate	C1211-W1-D	1
	Passenger Side Plate	C1211-W1-P	1
	Driver Angle Support Bracket	Sh-SPS-P1-D	1
	Passenger Angle Support Bracket	Sh-SPS-P1-P	1
	1"(2.54cm) x 2"(5cm) Plate Washer	10859	12
	2"(2.54cm) x 2"(2.54cm) Center Hole Plate Washer	11403	4
	1/2" x 4-5/8"(11.75cm) Chevy Galvanized Pipe	Saw-7571-4.625	2
	M14 - 2.0 x 40MM 10.9 Bolt	10209	2
	M14 Split Lock Washer 10.9 Zinc	13503	2
	M12 - 1.75 X 190 MM 10.9 Bolt	10337	2
	M12- Split Lock Washer 10.9 Zinc	20004	2
	7/16" Bolt Fisher	3818	1
	1/2" - 13 1-1/2" Hex Bolt Grade 8	9960	12

 Parts Inventory			
Item Image	Item Description	Item #	QTY
	1/2" - 13 x 2" Hex Bolt Grade 8	3659	4
	1/2" Washer USS Grade 5	6039	12
	1/2" Star Washer	4566	2
	1/2" Lock Washer High Alloy	9302	16
	1/2" - 13 Hex Nut Grade 8	1751	16
	7/16" - 14 x 1-3/4" Hex Bolt Grade 8	10317	2
	7/16" USS Flat Washer Grade 5	3536	2
	7/16" Lock Washer High Alloy	3311	2
	7/16" -14 Hex Nut Grade 8	9962	2
	5/8" Pin and Clip	3703	2
	3/8"-16 x 1-1/4" Hex Bolt Grade 5	4627	4
	3/8" Flat Washer USS	6001	8
	3/8"-16 Hex Nut Grade 5	3306	4
	Bumper Support Bracket	C1211-W2	1

!WARNING!

DO NOT LUBRICATE THREADS. BOLT FAILURE MAY OCCUR DUE TO OVERTIGHTENING.
DO NOT DRILL ON THIS HITCH.

**NOTE THE
DIRECTION
OF THE
SUPERHITCH
SIDE PLATES
BEFORE
ASSEMBLY**

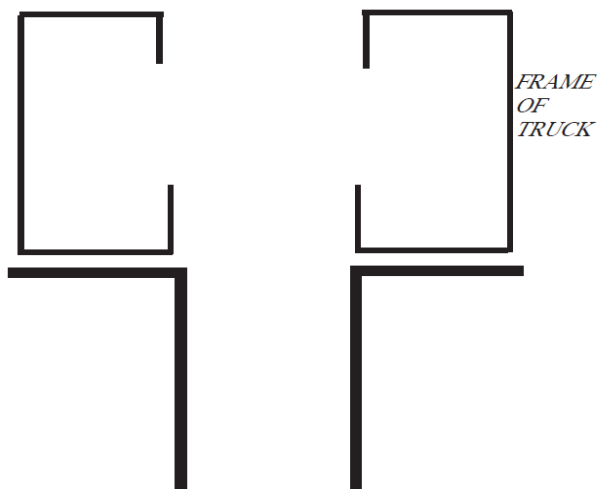

**SUPERHITCH PLATES
RUN-IN TOWARDS THE
CENTER OF THE
TRUCK FRAME IN THIS
APPLICATION**


**** READ ALL INSTRUCTIONS AND FAMILIARIZE YOURSELF WITH THE HITCH AND
FASTENERS BEFORE BEGINNING THE INSTALLATION ****

Step 1

Remove or loosen the spare tire and locate the driver side rear spring perch.

Step 2

There will be three factory fasteners on the bottom side of the frame. Remove the factory hardware from Hole 1, Hole 3, and Hole 4. The Nut for Hole 4 is welded to the frame, and will not be removed. See Photo 2.1 for hole locations.

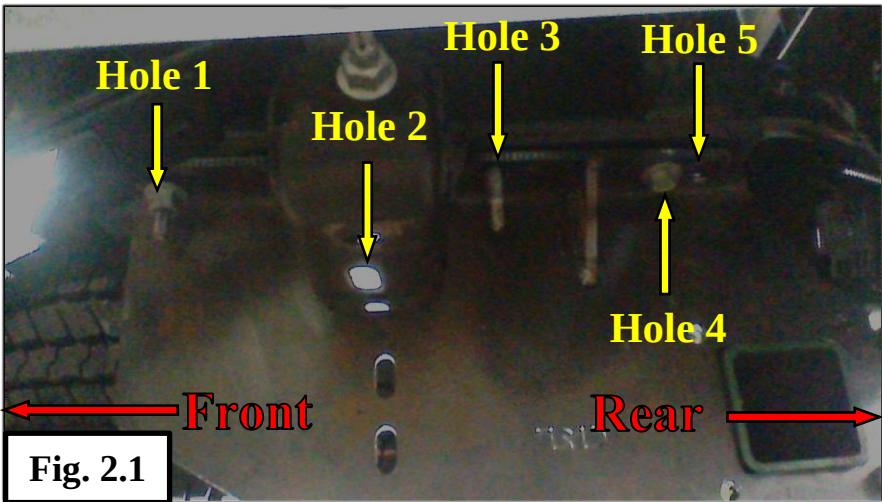

Step 3

Above Hole 5 in the frame is one additional factory bolt connecting the frame to the bed. Remove this factory bolt.

Step 4

Place the Side Plate up against the bottom of the frame, aligning Holes 1, 3, 4, and 5 on the frame with the four holes on the

Side Plate. Secure the Side Plate to the frame by hand tightening one M14-Bolt with one M14 lock washer through Hole 4 and into the Factory Nut.

Step 5


Next, install a M12 Bolt with a M12 lock washer through a 1"x 2" Plate Washer and part way through Hole 5. Place one 2" x 2" Center Hole Plate Washer inside the rear most part of the frame, centered over Hole 5.

Step 6

Continue by placing two 1/2" Washers and a 1/2" Galvanized Pipe over the 2" x 2" Center Hole Plate Washer installed in Step 5. Slide the M12 bolt up into the tube. See Photo 7.1 for an example.

Step 7

Finally, place a 2" x 2" Plate Washer on top of the 1/2" Galvanized Pipe. Slide the M12 Bolt through the 2" x 2" Plate washer, and thread it into the truck bed where the factory bolt was removed in Step 3. See Photo 7.1 for pipe and plate assembly.

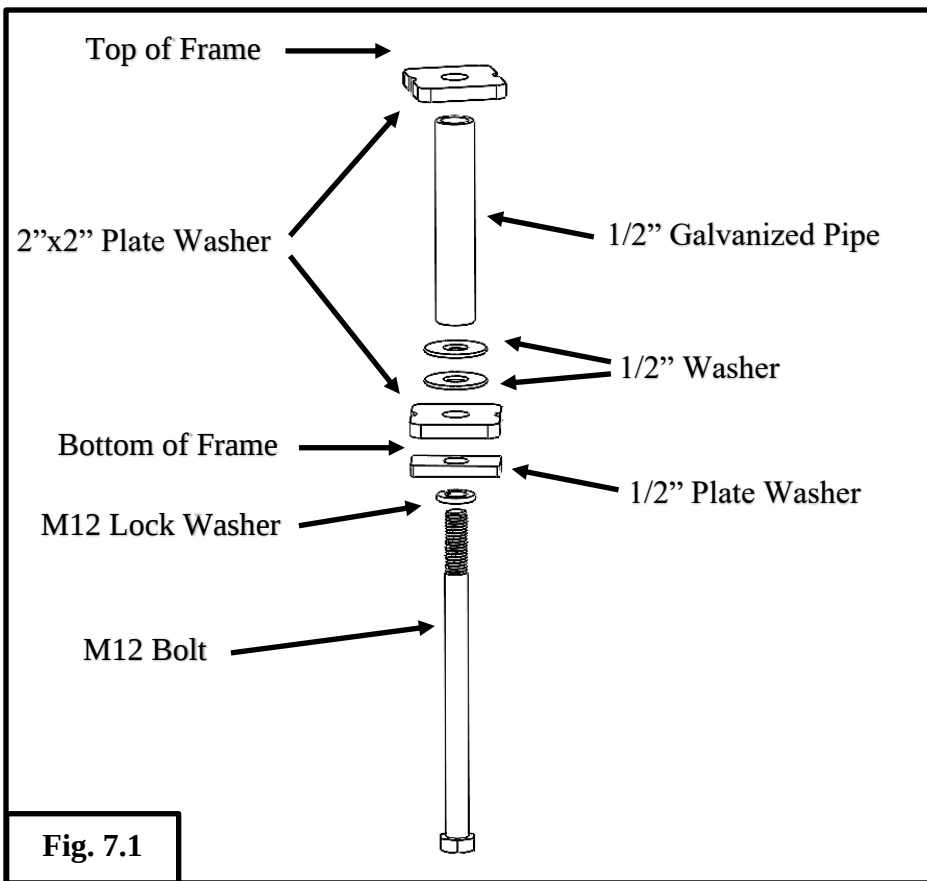


Step 8

Next, install one 1/2" Hex Bolt with one 1"x 2" Plate Washer down through Hole 2 from the inside of the frame. Repeat this process for Hole 1.


Step 9

Secure the bolts in Hole 1 and Hole 2 with one 1"x 2" Plate Washer, one 1/2" Lock Washer, and one 1/2" Hex Nut. Hand tighten the hardware. See Photo 9.1.

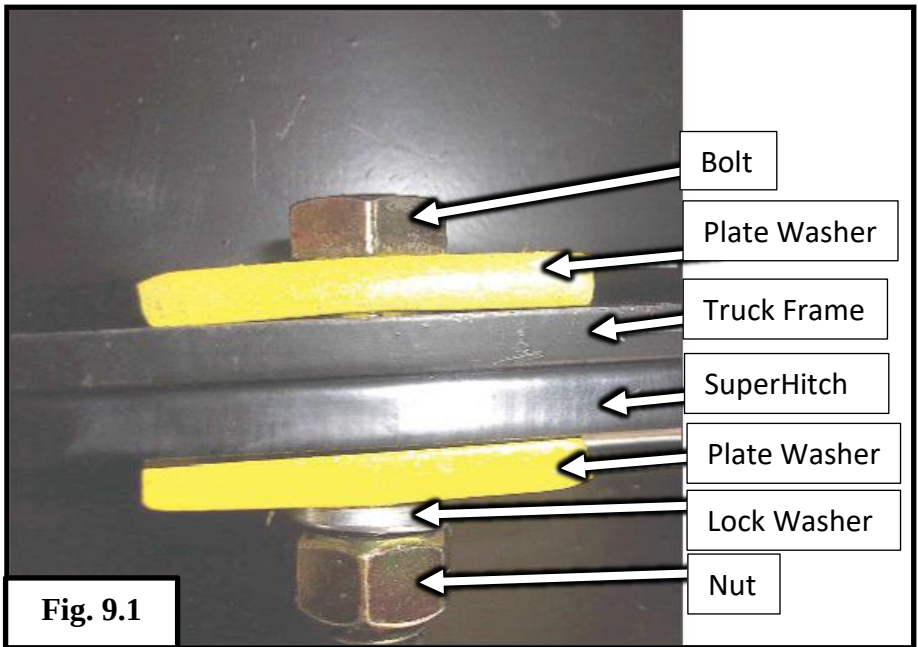

Step 10

Insert the coiled end of a bolt fisher up through Hole 4 and out through the large hole in the back of the frame. Place one 1/2" Star Washer followed by one 1" x 2" Plate Washer onto a 7/16"-14 x 1-1/2" Bolt. Attach this bolt assembly to the Bolt Fisher. See Figure 10.1 and 10.2 for reference.

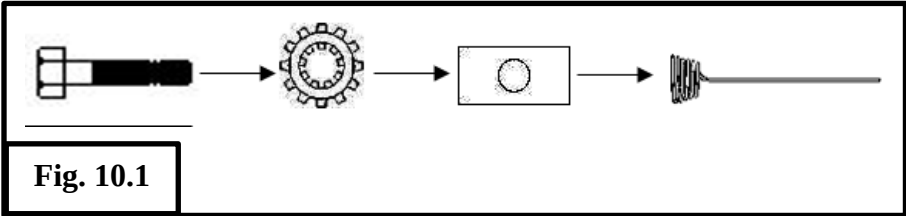



Step 11

Gently pull on the straight end of the bolt fisher until the threads of the 7/16" bolt protrude down through Hole 4. Remove the bolt fisher.

Step 12

Repeat steps 2-11 on the Passenger side.


Step 13

Raise one end of the Double Receiver Cross Tube and place it into the square hole on one of the Side Plates. Repeat the process on the other side of the Double Receiver Cross Tube.

Step 14

Install one 1/2" Hex Bolt through each of the four holes in the end of the Double Receiver Cross Tube and out through the Side Plates. The threads should be facing towards the outside of the vehicle.


Secure each 1/2" Hex Bolt on the outside of the Side Plate with a 1/2" Lock Washer, and a 1/2" Hex Nut. Hand tighten the hardware. See Figure 14.1 for reference.

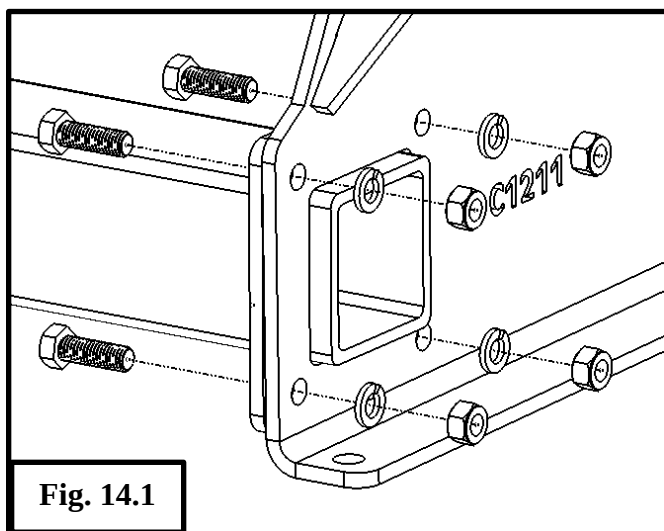

Step 15


Lift the Angle Support Bracket up to the leaf spring perch with the open side facing towards the front of the truck. The side with two holes will face towards the hitch. Place the bracket up against the frame with the previously installed 7/16 Hex Bolt protruding through the side with one hole. Be careful not to push the 7/16" bolt back into the frame.

Secure the bracket to the frame with a 7/16" Flat Washer, followed by a 7/16" Lock Washer, and a 7/16" Hex Nut. See Figure 15.1.

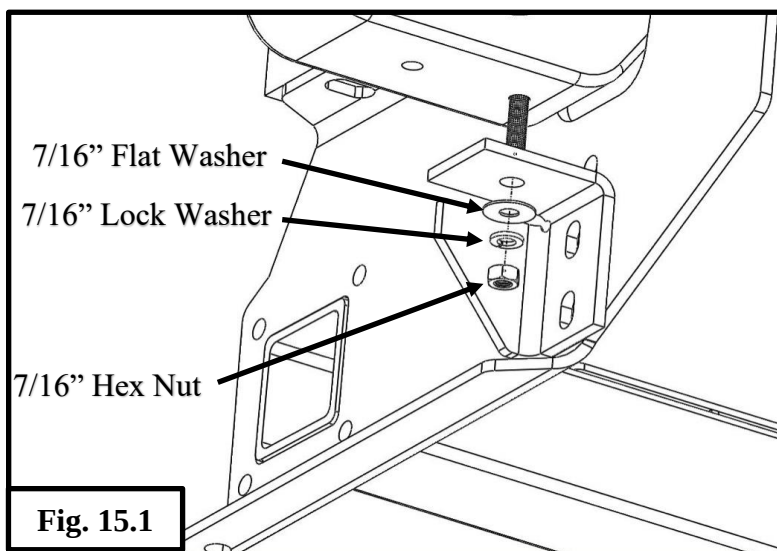


Step 16

Align the two Angle Support Bracket holes with the two holes in the Side Plates. Place one 1/2" Hex Bolt with one 1/2" Washer through each slot in the side plates and out through the Angle Support Bracket slots. Secure each bolt with a 1/2" Washer, and a 1/2" Hex Nut. Hand tighten the hardware. Repeat on the other side. See Figure 16.1

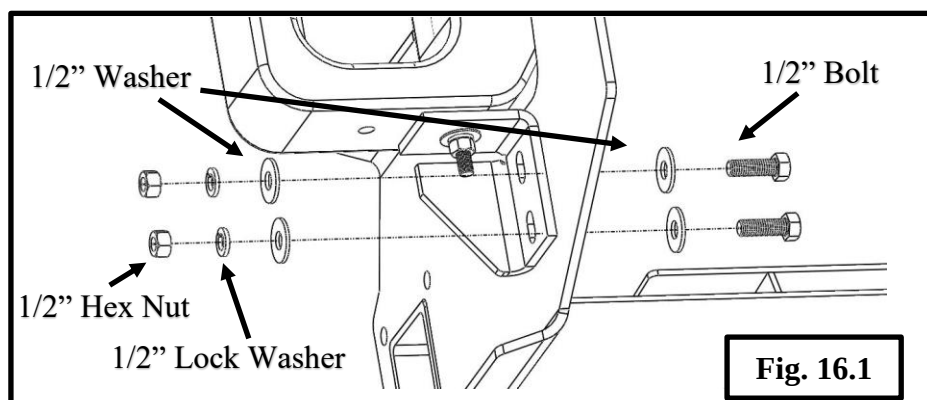

Step 17

Slide one end of the Bumper Support Bracket on top of the Double Receiver Cross Tube and behind the bumper. Slide the Bumper Support Bracket to the side until the other end of the Bumper Support Bracket can slide behind the bumper. Install the 3/8" fasteners as shown below in Figure 17.1 on both sides, hand tighten.

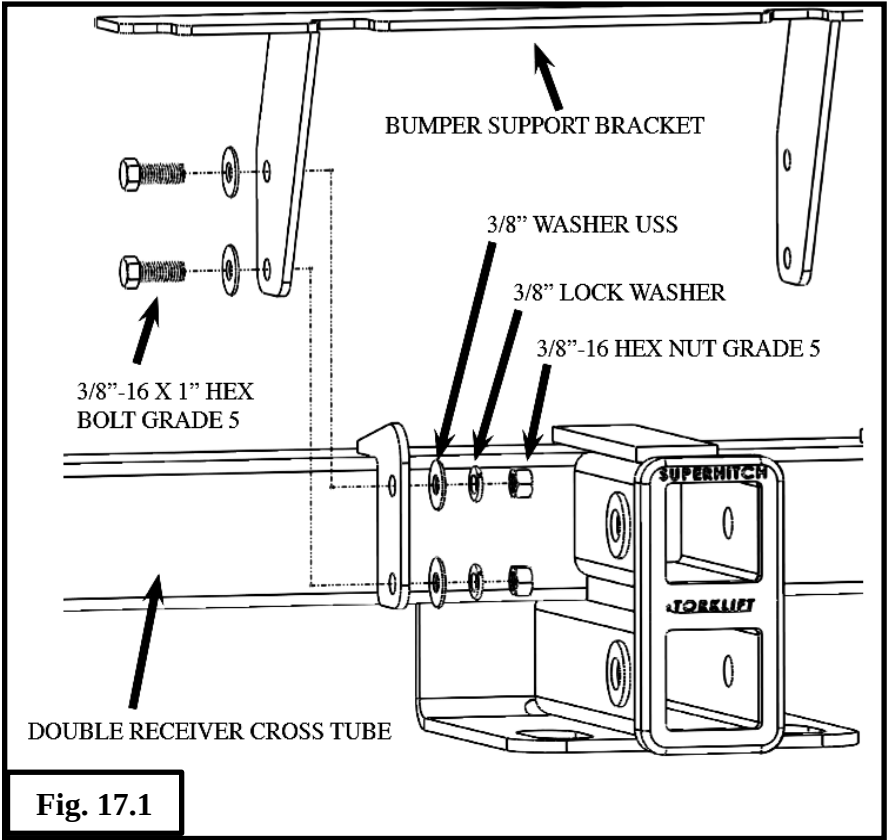

Step 18

Torque hardware in the following order:

1. Side Plates to frame
2. Double Receiver Cross Tube to Bumper Support Bracket
3. Double Receiver Cross Tube to Side Plates
4. Angle Support Brackets to Rear Spring Perch and Side Plate.

Torque Specifications

Torque all M14 Class 10.9 Bolts and 1/2" Grade 8 Bolts to 75 ft-lbs (101 Nm).

Torque all M12 Class 10.9 Bolts and 7/16" Grade 8 Bolts to 60 ft-lbs (81 Nm)

Torque all 3/8" Grade 5 Bolts to 20 ft-lbs (27Nm).


Step 19

Reinstall the Spare Tire.

Installation is complete

**THESE STEPS MAY VARY DEPENDING ON
WEIGHT DISTRIBUTION HITCH
MANUFACTURER**

**WEIGHT DISTRIBUTING
(LOAD EQUALIZING HITCH)**

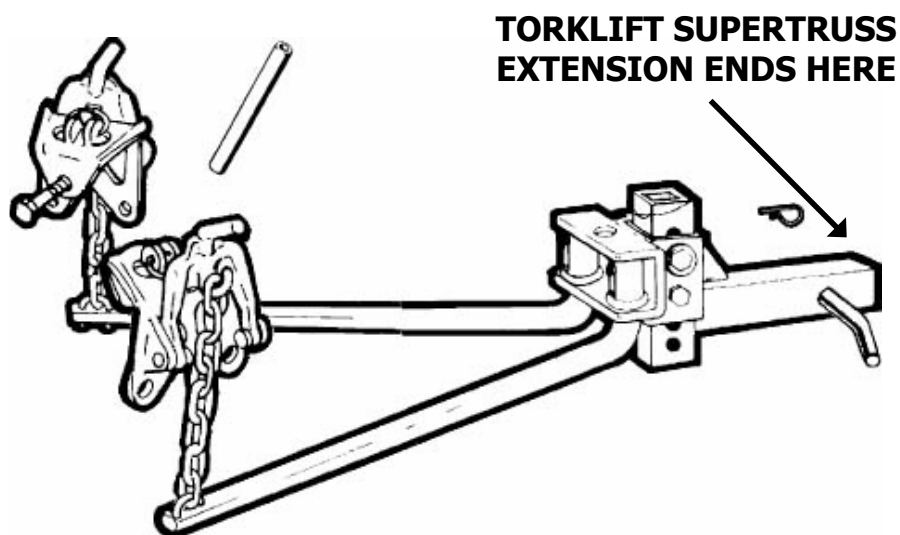

**THIS TYPE OF BALLMOUNT IS REQUIRED IN
ADDITION TO YOUR HITCH TO
OBTAIN THE MAXIMUM RATED CAPACITY.
INCORRECT INSTALLATION OF THE WEIGHT
DISTRIBUTION SYSTEM MAY RESULT IN
DAMAGE TO YOUR VEHICLE.**

WEIGHT DISTRIBUTION - CONTINUED

When towing trailers that exceed the dead weight rating on your extension it is mandatory to use a weight distributing type hitch/ball mount and related hardware (SPRING BARS, QUICK HOOKUP CLIPS ETC).


Not all weight distribution systems are rated at the same capacity. Your weight distributing ball mount and bars must be rated at least 100 lbs.(45kg) higher in regards to tongue weight, than your pre-existing tongue weight of your trailer **when fully loaded.**

It is of critical importance that your weight distribution system is not only rated high enough to match your existing tongue weight, but that you also have the system set up correctly.

We have supplied a formula to assist you in accurately determining the tongue weight load of your trailer when fully loaded. After accurately determining your tongue weight and making sure that your weight distribution system is rated high enough, your next step is to ensure the set up of the system is correct.

PLEASE READ CAREFULLY

1. The height of the ball must be determined before any assembly work can be started. To get ball height, measure trailer from ground level to top of ball coupler. Be sure trailer is parallel to ground. With your camper on your truck, fully loaded with gear and overloads adjusted, slide the weight distribution ball mount into the SuperHitch extension. Be sure the truck is on level ground. The measurement from ground to top of ball should be $1\frac{1}{2}$ "(4cm) higher than the level height of trailer top of ball measurement.

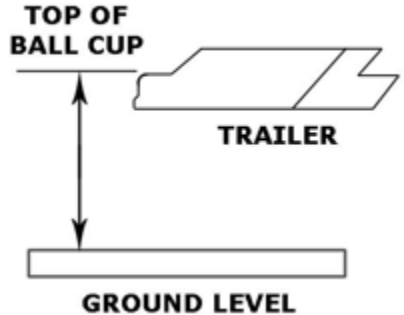

2. After ball height has been determined write down the ascertained height. EXAMPLE: Measured top of coupler height was 17"(43cm) from ground; ball height should be $18\frac{1}{2}$ "(47cm).

3. Slide the shank into the sleeve receiver, insert hitch pin and spring clip. With the ball attached to the ball mount, slide the ball mount up or down the shank until nearest dimension is obtained and the holes line up with shank. Insert the bolt in the bottom hole first (rest hitch head).


4. The rivet and 8 spacer washers are supplied in order to gain the correct downward angle of the spring bars. Insert rivet, and depending on the angle or the slope of bars that must be gained, use either 8 or the least amount of washers necessary in order to establish correct angle. The rivet and its accompanying washers are placed in the $\frac{1}{2}$ " hole between the "U" on the ball mount to acquire desired angle of spring bar. Once the spring bar angle has been determined, insert the top bolt with a flat washer, both sides, the lock washer, and nut to secure the unit in correct position, now insert the bottom bolt, use the lock washer and nut. Before tightening the bolts, lock the setscrew. (After the first day of towing, check set the screw for tightness).

See the following page for further illustrated diagrams

ILLUSTRATED DIAGRAMS

BEFORE HOOKING UP


Spring bat should hang down on a 10-13 degree angle when ball mount has been tilted back at 6-8 degree angle.

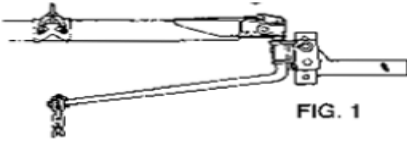



AFTER HOOKING UP

Spring bar should be parallel with trailer frame, or a slight angle up or down. Slight bow or bend to bar is normal.



WRONG Readjust degree of tilt on ball mount, if you have more than 5 links of chain hanging free. The number of links should be the same on both bars.

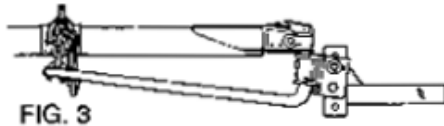

EACH WASHER LOWERS CHAIN END OF SPRING BAR APPROX. 1-1/2"

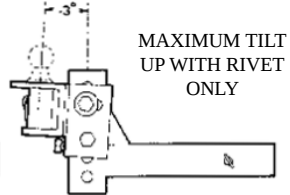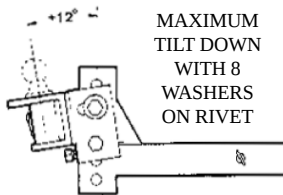


BOLT-TOGETHER BALL MOUNT HAS 7-1/2" ADJUSTMENT, EACH ADJUSTMENT IS 1-1/4" EXTRA HY-LOW SHANKS AVAILABLE IF NEEDED

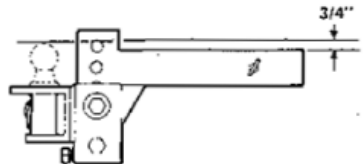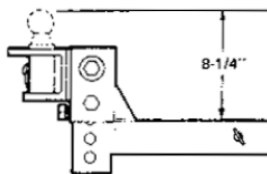

THESE STEPS MAY VARY DEPENDING ON WEIGHT

DISTRIBUTION HITCH MANUFACTURER

1. Put the ball mount into the sleeve and insert the 5/8" hitch pin using spring clip to lock the pin into place, hitch balls are not furnished with the hitch as there are several sizes. Normally they are supplied or may be purchased from the dealer to match the coupler of the trailer. Ball shank bushings are supplied to reduce the size of the ball hole in the hitch down to 1"(2cm) if needed.
2. Measure the towing vehicle ball height before adding load to towing vehicle. Hook the trailer to the truck. Lock on the ball. To make hooking up easier and safer - raise front of the trailer and back of the towing vehicle above level with the trailer tongue jack. This removes some of the tension by reducing the distance between the spring bar and hook-up arm.

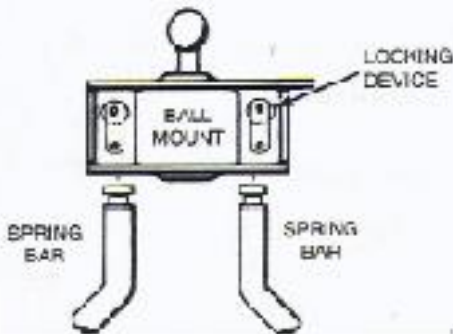


3. This step may vary depending on the manufacturer. The spring bars can be inserted into either side of the ball mount. (There is no 'right' or 'left' bar). To insert and lock spring bar in socket, hold the bar under socket and push up. The spring bar will automatically be locked into position by the

spring bar-locking device. (Check to make sure the bar is locked in by moving it up and down at the chain end.) To remove the spring bars, just pull out the locking device or swing the bar around under the bumper and it will drop free.

4. To find correct location on trailer frame for quick hook-up bracket, hold the chain straight up and down and free of twist center hook-up bracket on frame and tighten. Set the screw 1/4 turn only. **DO NOT OVERTIGHTEN.** On straight tongue trailers a poli-tongue adapter is necessary

5. You are now ready to put tension on the spring bars. When using the quick hook-up, lower the arm and slip link of chain over hook. Insert hook-up handle over the end of the quick hook-up arm. Lift and flip over center. (See fig A).

Continue onto next page for further directions

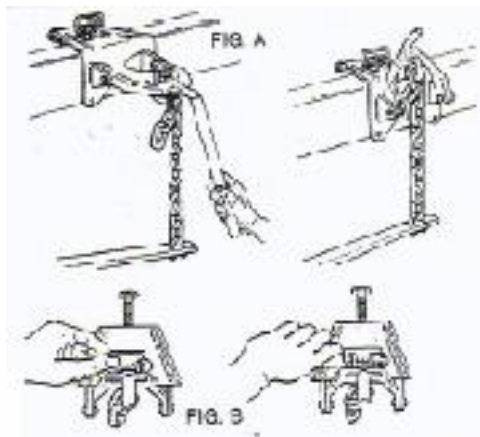

CAUTION: MAKE SURE THAT THE HOOK-UP ARM IS COMPLETELY SEATED AND THAT THE SPRING BAR IS PUSHED DIRECTLY UNDER THE HOOK-UP CHAIN HOOK.

Now install the hook-up locking clip through locking ears and over hook on hook-up arm. (See fig B)

6. Release the trailer tongue jack by adjusting the chain links up or

down; the desired load on the bars will be gained. Now lock the coupler on to the ball and raise the front of the trailer approximately 3"(8cm) above level. Now attach the chain link to the hook-up clip. It should require 50-100 lbs.(22-45kg) of force to properly tension the spring bars. Bow or bend to the spring bar is normal.


7. To release tension on the spring bars, raise the front of the trailer and the back of the towing vehicle above level (approx. 3"(8cm)) with the trailer tongue jack. Remove the locking clip from the bracket. Insert the handle over arm. Carefully lower the arm with the handle. It will require effort to bring the arm over the center and then to resist the chain tension as the arm rotates downward.

MAINTENANCE:


Use heavy lubrication such as fibre type wheel bearing grease on the hitch ball and on spring bars inside the ball mount. This is recommended every day. Also keep the hitch painted to prevent rust and check the tightness of bolts regularly. Clean out old grease and do not let it harden inside of the ball mount

IMPORTANT CONSUMER INFORMATION ON TOWING

TOWING EQUIPMENT OWNERS: Make sure all of the operators of your equipment read and understand this information before towing. Save for reference. This will help you properly select, use, and maintain your towing equipment. Refer to your owner's manuals for your tow vehicle, trailer, and other parts of your towing system. Learn the capabilities and limitations of each part. The **GROSS TRAILER WEIGHT** and **TONGUE WEIGHT** are two of the most important items to consider. **THESE WEIGHTS MUST NEVER EXCEED THE LOWEST RATING OF ANY PART OF YOUR TOWING SYSTEM.** **GROSS TRAILER WEIGHT** is the weight of the trailer plus all cargo. Measure the **GROSS TRAILER WEIGHT** with the fully loaded trailer on a level surface. The weight is the downward force exerted on the ball by the trailer coupler. Measure the **TONGUE WEIGHT** with the fully loaded trailer on a level surface. The coupler must be at its normal towing height. Use a commercial scale or a bathroom scale as shown for heavy tongue weights.

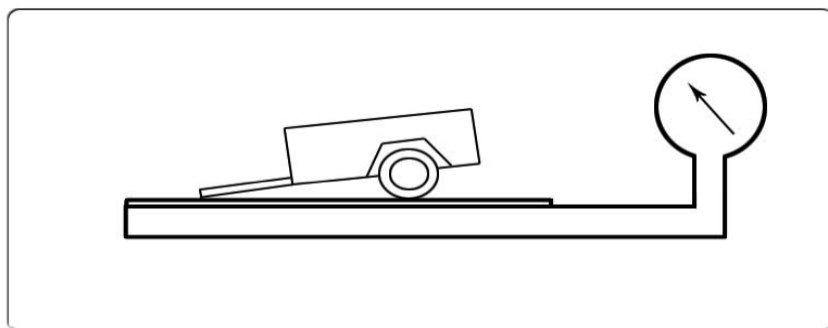

**Method for Measuring
Gross Trailer Weight**

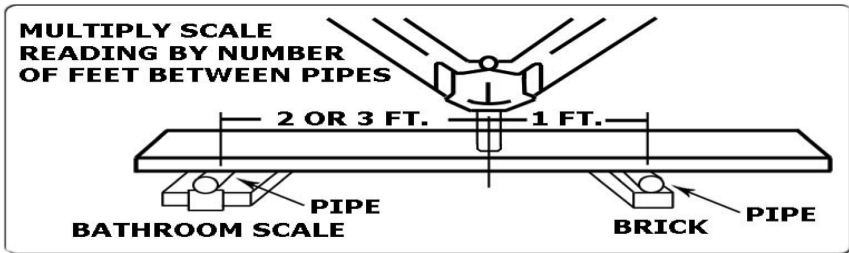

Method for Measuring Trailer Tongue Weight

YOUR TOWING EQUIPMENT

HITCH BALLS

Select by gross trailer weight rating, mounting platform thickness, hole size and coupler socket size. Platform must be at least 3/8 inch thick. Hole must not exceed threaded shank diameter by more than 1/16 inch. Use lock washer. Tighten per instructions. When tightened, shank must protrude beyond bottom of nut. Gross trailer weight rating and ball diameter are marked on Hitch balls.

TRAILER COUPLERS

The coupler socket should be smooth, clean and lightly lubricated. Tighten or adjust per coupler manufacturer's instructions.

SAFETY CHAINS

Connect safety chains properly EVERY TIME YOU TOW. Cross chains under coupler. Attach securely to the hitch or tow vehicle so they can't bounce loose. Leave only enough slack to permit full turning. Too much slack may prevent chains from maintaining control if other connections separate. Don't let chains drag on the road.

TRAILER LIGHTS, TURN SIGNALS, ELECTRIC BRAKES AND BREAK AWAY SWITCH CONNECTIONS

Make these safety-critical connections EVERY TIME YOU TOW, no matter how short the trip. Check operation, including electric brake manual control, before getting on the road.

SWAY CONTROLS

Sway controls can lessen the effects of sudden maneuvers, wind gusts and buffeting caused by other vehicles. We recommend them for trailers with large surface areas, such as travel trailers. Adjustable friction models can help control trailers with low tongue weight percentage.

OTHER USEFUL EQUIPMENT

AIR SPRINGS, AIR SHOCKS or HELPER SPRINGS are useful for some hitch applications. A TRANSMISSION COOLER may be necessary for heavy towing. Many states require TOWING MIRRORS on both sides.

TIRE INFLATION

Check often. Follow tow vehicle and trailer manufacturer's recommendations. Improper tire inflation can cause trailer sway.

NO PASSENGERS IN TRAILERS: NEVER allow people in trailers while towing, under any circumstances.

HELPFUL TOWING HINTS

TRAILER LOADING

Proper loading helps prevent sway. Place heavy object on the floor ahead of the axle. Balance the load side-to-side. Secure it to prevent shifting. Tongue weight should be 10-15 percent of gross weight for most trailers. Too low a percentage of tongue weight can cause sway. NEVER load the trailer rear heavy. **LOAD THE TRAILER HEAVIER IN FRONT**

DRIVING

The additional weight of a trailer affects acceleration, braking, and handling. Allow extra time for passing, stopping, and changing lanes. Severe bumps can damage your towing vehicle, hitch, and trailer. Drive slowly on rough roads. **STOP AND MAKE A THOROUGH INSPECTION IF ANY PART OF YOUR TOWING SYSTEM STRIKES THE ROAD. CORRECT ANY PROBLEMS BEFORE RESUMING TRAVEL.**

CHECK FOR EXCESSIVE SWAY AND ELIMINATE IT

Excessive sway can lead to loss of control. Sway motion should settle out quickly. Sway tends to increase on a downgrade. Starting slowly, increase speed in gradual steps. If sway occurs, adjust your trailer load and equipment. Repeat until the trailer is stable at highway speed. Do this whenever your trailer loading changes.

IF TRAILER SUDDENLY STARTS TO SWAY

Turbulence from another vehicle, a wind gust, or a downgrade can cause sudden sway. So can a shift of the trailer's load or a trailer tire blowout. **IF THE TRAILER SWAYS, IT IS THE DRIVER'S RESPONSIBILITY TO ASSESS THE SITUATION AND TAKE APPROPRIATE ACTION.** Below are suggestions that may apply, depending on conditions:

DO

- Reduce your speed gradually
- Hold the steering wheel as steady as possible
- If your trailer has electric brakes, apply the brakes alone, without using the tow vehicle's brakes.

DON'T

- Don't hit your brake pedal hard unless absolutely necessary. A "jack-knife" can result.
- Don't try to steer out of the sway condition. Sudden or violent steering can make it worse.
- Don't speed up. Sway increases as you go faster.
- Don't continue towing a trailer that tends to sway. You may lose control during an emergency maneuver or if the conditions listed above occur.

Torklift International Limited Lifetime Warranty Information

322 N. Railroad Ave. Kent, WA 98032

Torklift will require proof of purchase to register, with pictures of any defective product before issuing a replacement. Torklift will not register any product without proof of purchase, which can be faxed, scanned, emailed, or mailed to the information provided below. Torklift warrants its hitches, custom hitch receivers, frame mounted tie downs, turnbuckles, and accessories (excluding wire harnesses which carry a 90 day warranty) from date of purchase against defects in material and workmanship under normal use and service for the ownership life of the original consumer purchaser. All plastic, rubber, and/ or electrical components maintain a warranty of up to one year from the date of the purchase. **ALL COMMERCIAL APPLICATIONS ARE WARRANTED FOR A PERIOD OF 90 DAYS FROM THE DATE OF INSTALLATION/SERVICE.** Torklift will replace **FREE OF CHARGE** any part which proves defective in material or workmanship when presented to Torklift, **TRANSPORTATION CHARGES PREPAID** by purchaser, at the address above. **THIS WARRANTY IS LIMITED TO DEFECTIVE PARTS REPLACEMENT ONLY. LABOR CHARGES AND/OR DAMAGE INCURRED IN INSTALLATION OR REPLACEMENT, AS WELL AS INCIDENTAL AND CONSEQUENTIAL DAMAGES CONNECTED THEREWITH ARE EXCLUDED.** This warranty does not include the finish or paint on our products. Rusting, cracking or peeling of the finish is also excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Any damage to Torklift products as a result of misuse, abuse, neglect, accident, improper installation or any use violative of instructions furnished by Torklift or **WHEN USED IN ANY COMMERCIAL APPLICATION WILL VOID THE WARRANTY.** This warranty gives you specific legal rights, and you may also have rights which vary from state to state. With warranty service, you may be able to go to a small claims court, a state court or a federal district court.

Dear Valued Customer,

Thank you for making TorkLift your choice for truck, camper packages and accessories for your vehicle. By choosing TorkLift products, you have chosen a company that has been serving the RV industry for nearly 40 years and whose name has become synonymous with strength, quality and advanced design and installation.

Please take a few moments of your time to complete the Product Registration Warranty Card on the next page. When registering your newly purchased TorkLift products, you can be assured that your contact information is secure and that you and your product are getting the attention and respect that you deserve.

Thank you again for choosing TorkLift quality products.

Register for your lifetime warranty and receive a free Torklift International gift.

To Fax: Send copies of the questionnaire, warranty card and receipt to
253-854-8003

To E-mail: Send copies of the questionnaire, warranty card and receipt to
warranty@torklift.com

To Mail: Send to Torklift International 322 N. Railroad Ave Kent, WA 98032

OFFICIAL WARRANTY REGISTRATION CARD

PLEASE FILL OUT THIS FORM COMPLETELY AND RETURN TO TORKLIFT WITHIN

30 DAYS OF PURCHASE ACCOMPANIED BY A COPY OF YOUR ORIGINAL RECEIPT

COPYRIGHT© 2021, By Torklift International, Inc. All rights reserved. pg.



1. PART(S) PURCHASED

TODAY'S DATE: _____

PART#: _____ PART#: _____

PART#: _____ PART#: _____

PART#: _____ PART#: _____

2. PURCHASER INFORMATION

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP / POSTAL CODE: _____

PHONE: () - _____ EMAIL: _____

3. TRUCK INFORMATION

YEAR: _____ MAKE: _____

MODEL: _____ BED LENGTH: _____

4. CAMPER INFORMATION

YEAR: _____ MAKE: _____ MODEL: _____

5. DEALER INFORMATION

PURCHASED FROM: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP / POSTAL: _____

INSTALLED BY: _____ OWNER _____ ABOVE DEALER _____ ANOTHER DEALER _____

IF ANOTHER DEALER, WHO: _____