

# FRONT MOUNTED RECEIVER INSTALLATION INSTRUCTIONS

VEHICLE

RECEIVER NO.

DODGE DAKOTA 4X4  
DODGE DURANGO 4X4

13518

## EQUIPMENT REQUIRED:


## DRILL BITS:

HITCH REQUIRES 5/8" PIN AND CLIP IF STABILIZING PIN IS NOT INSTALLED.

WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 7/8, 18mm


CARGO CAPACITY – DO NOT EXCEED  
300 LB. OR VEHICLE FRONT GROSS  
AXLE WEIGHT RATING. (GAWR)

9000 LB. MAX. WINCH LINE PULL

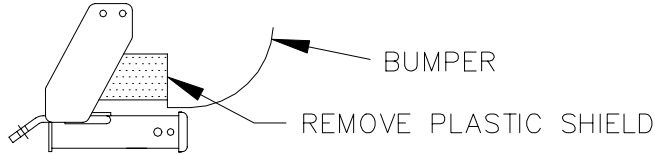


NOTE: ALL FASTENERS TYPICAL BOTH SIDES OF VEHICLE

RECEIVER SHOWN IN PROPER POSITION

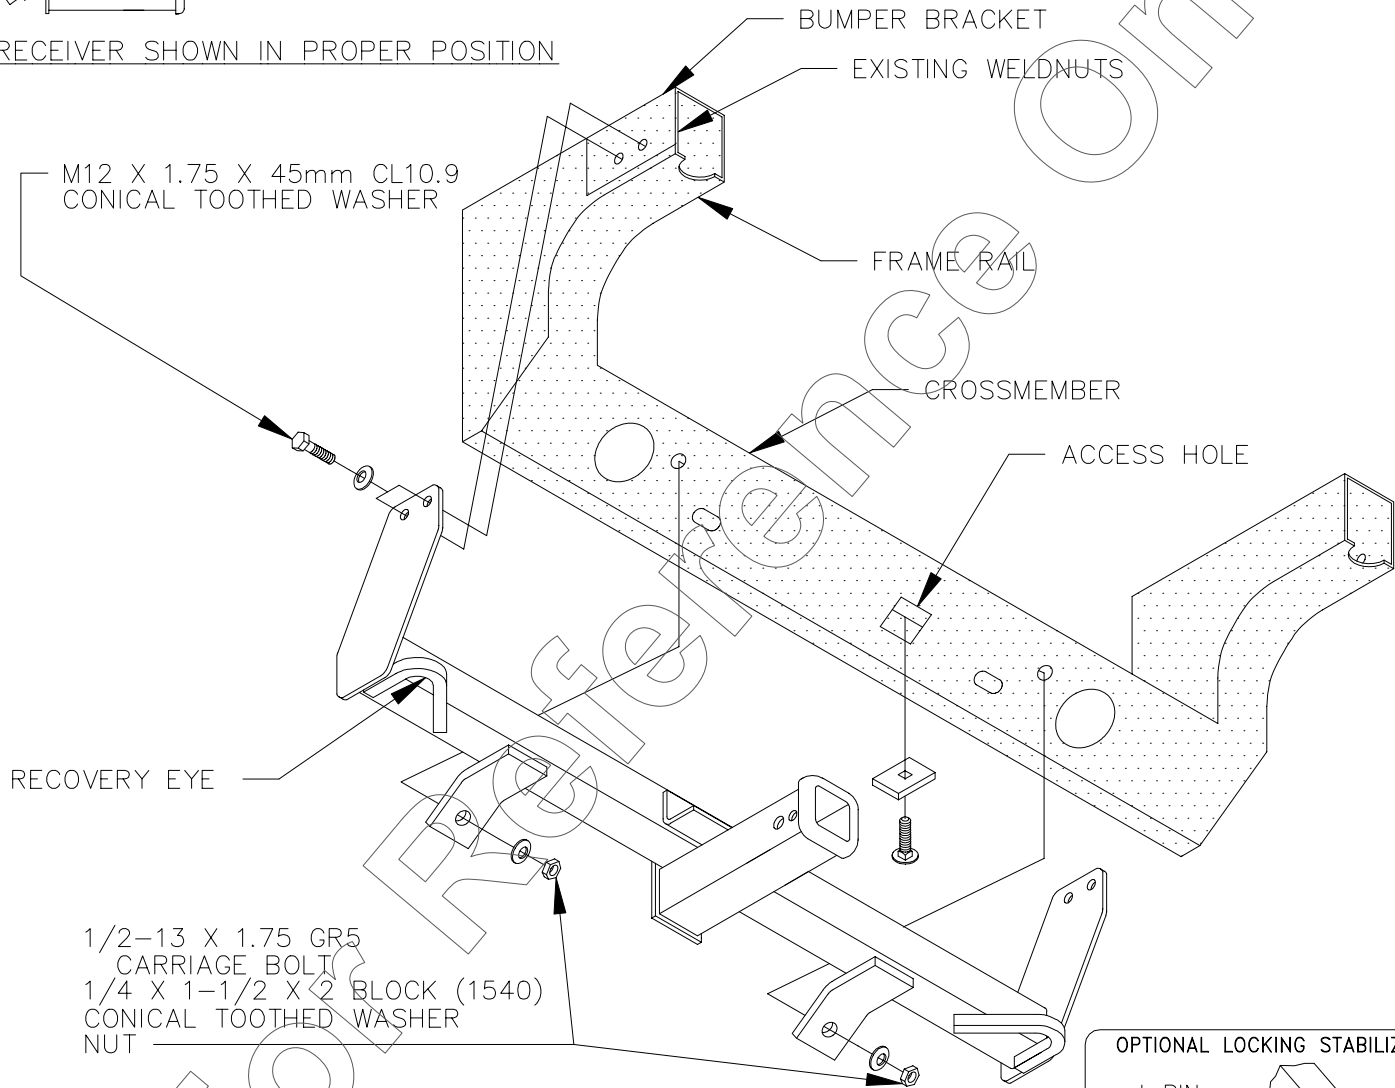

## OPTIONAL LOCKING STABILIZING PIN

J-PIN

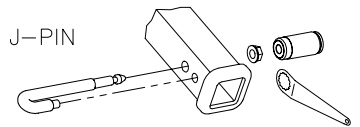

(Order Separately)

1. REMOVE PLASTIC SHIELD AND RETURN TO VEHICLE OWNER.
2. REMOVE EXISTING FASTENERS FROM BUMPER BRACKETS.
3. RAISE RECEIVER INTO POSITION AND INSTALL FORWARD FASTENERS AS SHOWN ABOVE.
4. FISHWIRE REARWARD FASTENERS THRU ACCESS HOLE IN CROSSMEMBER AS SHOWN ABOVE.

TIGHTEN ALL M12 CL10.9 FASTENERS TO 75 LB-FT.

TIGHTEN ALL 1/2 GR5 FASTENERS TO 75 LB-FT.

APPROX WEIGHT: 41 LB. / 18.6 KG

NOTE: Check receiver frequently, making sure all fasteners are properly tightened. A receiver which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection.

**WARNING:** DO NOT CUT ACCESS OR ATTACHMENT HOLES WITH A TORCH.  
DO NOT CUT, WELD, OR MODIFY RECEIVER.

Reese Products, INC.  
Elkhart, IN.  
Oakville, ONT. Canada