

SPORTFRAME INSTALLATION INSTRUCTIONS

VEHICLE
NISSAN NX COUPE

HITCH NO.
24556

EQUIPMENT REQUIRED:

DRILL BITS:

WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 12mm, 13mm, 14mm, 17mm

2000 LB MAX GROSS TRAILER WT
200 LB MAX TONGUE WEIGHT
DO NOT EXCEED TOWING VEHICLE RATING

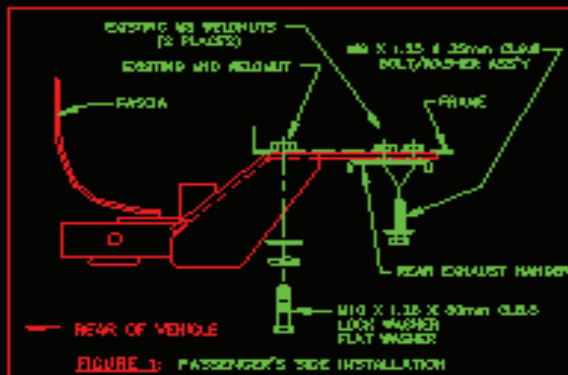


FIGURE 1: PASSENGER'S SIDE INSTALLATION

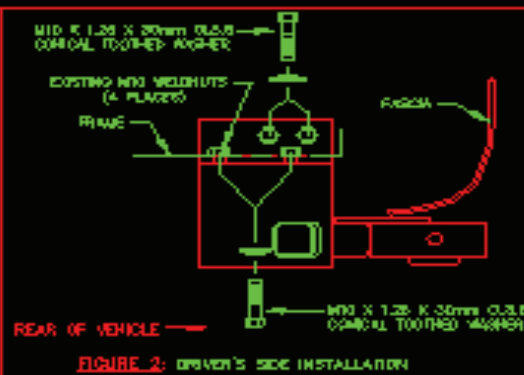


FIGURE 2: DRIVER'S SIDE INSTALLATION

NOTE: THE M10 & M8 NUTS ARE FOR SHIPPING ONLY AND MAY BE DISCARDED.

- REMOVE FOUR (4) M10 BOLTS WHICH ATTACH THE DRIVER'S SIDE TIE-DOWN BRACKET TO THE FRAME.
NOTE: RETURN TIE-DOWN BRACKET AND BOLTS TO VEHICLE OWNER FOR REINSTALLATION IF THE HITCH IS REMOVED FROM THE VEHICLE.
- LOWER EXHAUST BY REMOVING TWO (2) M8 BOLTS WHICH CONNECT REAR EXHAUST HANGER TO BOTTOM OF FRAME.
NX 2000 COUPE ONLY:
REMOVE M8 BOLT FROM SECOND EXHAUST HANGER FURTHER FORWARD ON VEHICLE.
REMOVE CHROME EXHAUST TIP FROM END OF TAIL PIPE.
- POSITION HITCH ON VEHICLE AS SHOWN ABOVE.
NOTE: HITCH WILL BE INSTALLED ABOVE TAIL PIPE.
- PASSENGER'S SIDE INSTALLATION:**
INSTALL M10 BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN IN FIGURE 1. INSTALL TWO (2) M8 BOLT/WASHER ASSEMBLIES THROUGH REAR EXHAUST HANGER AND HITCH AS SHOWN IN FIGURE 1.
- DRIVER'S SIDE INSTALLATION:**
INSTALL FOUR (4) M10 BOLTS AND FOUR (4) CONICAL TOOTHED WASHERS AS SHOWN IN FIGURE 2.
- NX 2000 COUPE ONLY:**
REPLACE THE CHROME EXHAUST TIP. REPLACE THE M8 BOLT WHICH ATTACHES THE FORWARD EXHAUST HANGER.

TIGHTEN M8 CL8.8 FASTENERS TO 25 LB.-FT.
TIGHTEN M10 CL8.8 FASTENERS TO 35 LB.-FT.



DRAWBAR REPLACEMENT KIT
(INCLUDES PIN & CLIP)

3593

NOTE: REPLACEMENT DRAWBAR AVAILABLE ONLY IN KIT. PINS & CLIPS AVAILABLE SEPARATELY.

USE ONLY THE DRAWBAR SHOWN FOR CORRECT BUMPER CLEARANCE AND HEIGHT.
DRAWBAR MUST BE USED IN THE RISE POSITION ONLY.

REMOVE DRAWBAR WHEN NOT TOWING
TO PROTECT DRAWBAR OPENING IN HITCH WHEN NOT TOWING,
INSERT COVER #2211 (PURCHASED SEPARATELY).

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR CONNECTING DEVICES AND TOWING SYSTEMS OF THE STATE OF NEW YORK AND V.E.S.C. REGULATION V-5.

APPROX. HEIGHT (I.B.)

28.4

PARTS KIT NO.

1130-792

Draw-Tite

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in front pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut, groove or abrade metal holes with a torch.

© Draw-Tite, Inc.

Draw-Tite, Inc.
40500 Van Born Road
Canton, Michigan 48106

PAGE 1 OF 2