
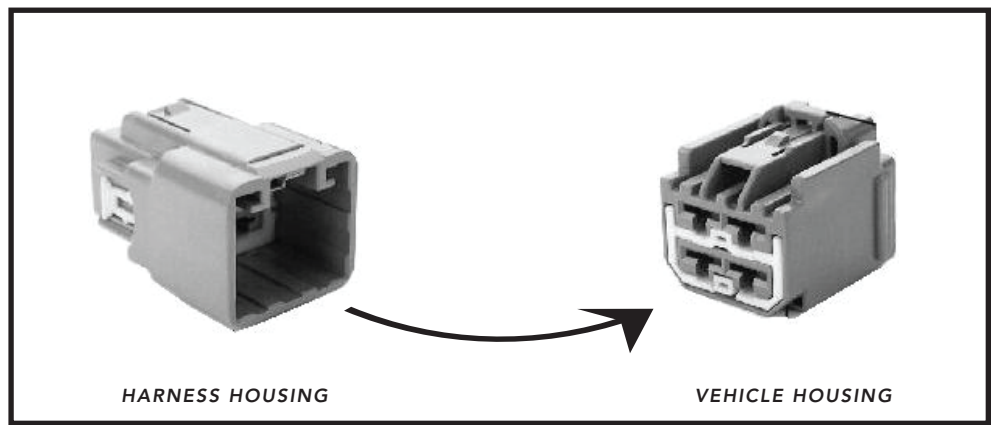


I-2137

FORD SUPER DUTY PICKUPS

**ELECTRIC BRAKE CONTROL
ADAPTER HARNESS WITH QUICK PLUG
ARNÉS DEL ADAPTADOR DEL CONTROL
DEL FRENO ELÉCTRICO.**

**FAISCEAU D'ADAPTEUR DE COMMANDE
DE FREIN ÉLECTRIQUE**

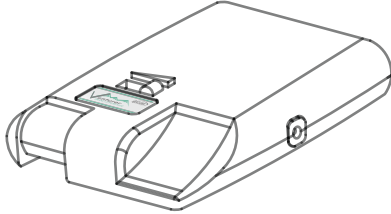

MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement fileté.

10/29/2010

English

1. Locate the vehicle's electric brake control harness. This harness is located behind the storage pocket just above the vehicle's ashtray towards the center of the dashboard. Carefully remove the storage pocket and locate the 4-pin grey harness connector plugged into the rear of the pocket that matches the end of the brake control adapter.
2. Disconnect the harness from the storage pocket. Plug the brake control adapter into the vehicle's electric brake control harness connector.
3. Plug the remaining connector into your Curt brake control.
4. Complete the installation and perform the setup procedure per the Installation and User Guide supplied with the brake control.

NOTE: Vehicles not equipped with OEM trailer tow package, may require fuses and relays to complete output & battery feed circuits (sold separately). Consult owners manual for locations.

**INSTALLATION QUESTIONS?
CALL TECHNICAL SUPPORT AT 1-800-798-0813**