


I-2138

INFINTI QX56 NISSAN FRONTIER NISSAN PATHFINDER NISSAN TITAN

ELECTRIC BRAKE CONTROL
ADAPTER HARNESS

ARNÉS DEL ADAPTADOR DEL CONTROL
DEL FRENO ELÉCTRICO.

FAISCEAU D'ADAPTATEUR DE COMMANDE
DE FREIN ÉLECTRIQUE

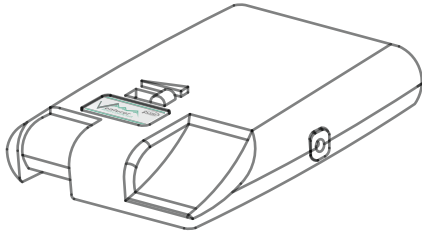

MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement fileté.

3/29/2011

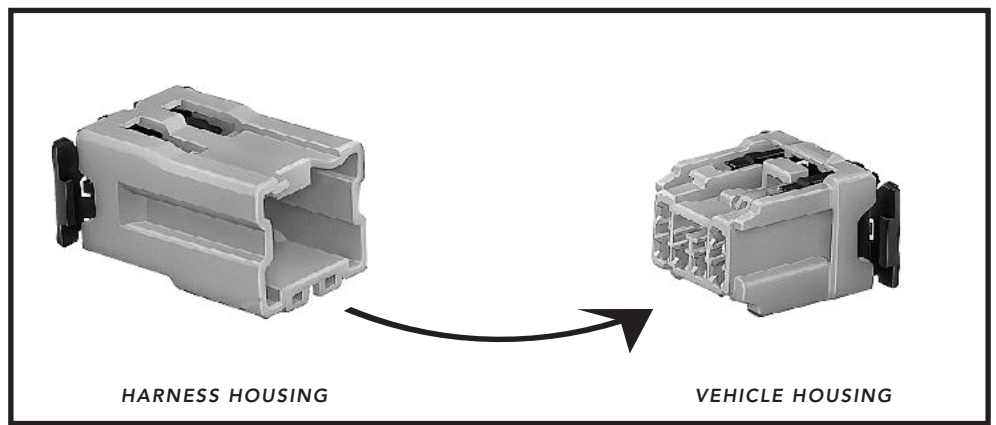

English

1. Locate the vehicle's electric brake control harness. The harness will be located underneath and left of the steering column, taped to another harness near the emergency brake pedal. There will be a 6-pin connector that mates with the one on the adapter.

2. Plug the brake control adapter into the vehicle electric controller connector.

3. Plug the remaining connector into your Curt brake control.

4. Complete the installation and perform the set up procedure per the Installation and User Guide supplied with the brake control.

NOTE: Vehicles not equipped with OEM trailer tow package, may require fuses and relays to complete output & battery feed circuits (sold separately). Consult owners manual for locations.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813