



# I-2142

## BUICK ENCLAVE GMC ACADIA SATURN OUTLOOK

ELECTRIC BRAKE CONTROL  
ADAPTER HARNESS

ARNÉS DEL ADAPTADOR DEL CONTROL  
DEL FRENO ELÉCTRICO.

FAISCEAU D'ADAPTEUR DE COMMANDE  
DE FREIN ÉLECTRIQUE

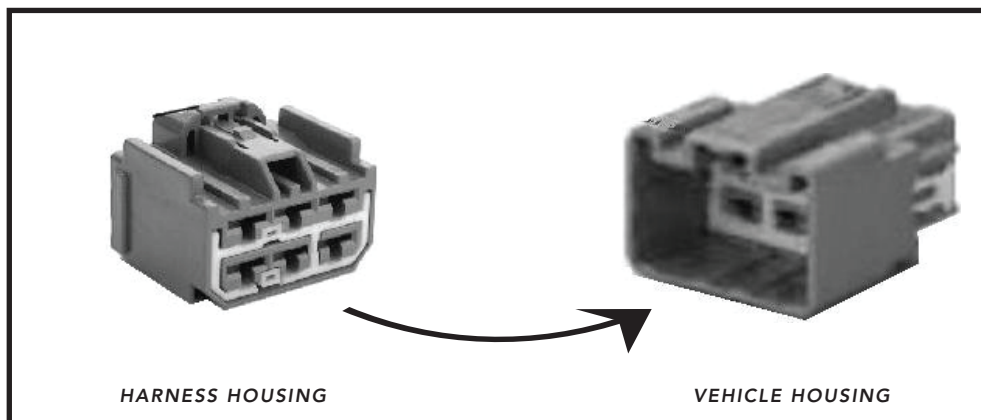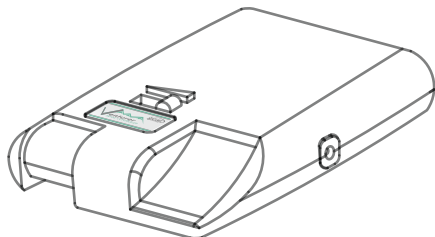

### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement fileté.

10/29/2010

## English

1. Carefully remove vehicle trim panel underneath dash making sure not to pull on courtesy lamp wires that are attached.
2. Locate the vehicle's electric brake control harness connector. The harness will be located underneath the dash and left of the steering column, taped to another harness near the emergency brake pedal. There will be a 6-pin connector that mates with the one on the adapter.
3. Plug the brake control adapter into the vehicle electric controller connector.
4. Plug the remaining connector into your Curt brake control.
5. Complete the installation and perform the setup procedure per the Installation and User Guide supplied with the brake control.

### Note:

For vehicles with no power supply to or from the brake control adapter, use an electric brake control wiring kit, such as Curt 51500, connecting and routing wires per the Installation and User Guide supplied with the brake control.

**INSTALLATION QUESTIONS?  
CALL TECHNICAL SUPPORT AT 1-800-798-0813**