


51438

DODGE RAM 1500

ELECTRIC BRAKE CONTROL
ADAPTER HARNESS

ARNÉS DEL ADAPTADOR DEL CONTROL
DEL FRENO ELÉCTRICO.

FAISCEAU D'ADAPTATEUR DE COMMANDE
DE FREIN ÉLECTRIQUE

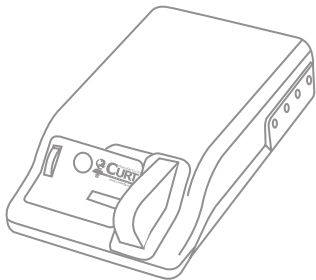

MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement fileté.

8/24/2011



English

1. Locate the vehicle's electric brake control harness. The harness will be located underneath the dash, just to the right of the emergency brake, taped to another harness. It will be a 4-pin housing, this housing plugs into the brake control harness supplied. [A]

2. Plug the two housings together making sure the housings are fully inserted with the locking tabs in place. [B] Connect the housing(quick plug) on the other end into the mating housing on the brake controller.

3. Complete the installation per the electric brake control manufacturer's instructions and mount the unit as directed. Perform test procedures as instructed.