


51440

KIA BORREGO

ELECTRIC BRAKE CONTROL ADAPTER HARNESS

ARNÉS DEL ADAPTADOR DEL CONTROL
DEL FRENO ELÉCTRICO.

FAISCEAU D'ADAPTEUR DE COMMANDE
DE FREIN ÉLECTRIQUE

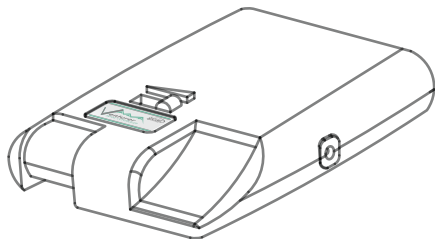

MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

11/30/2010

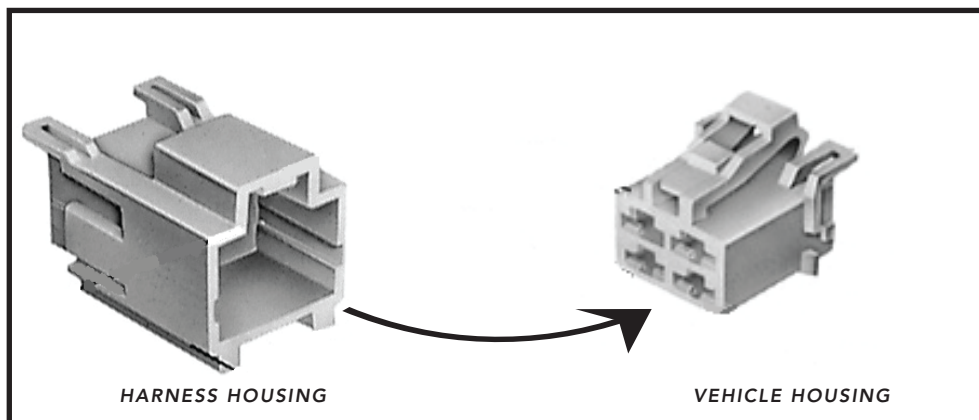

WIRE COLOR DESIGNATORS DESIGNADORES DEL COLOR DEL ALAMBRE INDICATEURS DE COULEUR DE FIL

BLACK	>	BATTERY POWER (+)
NEGRO	>	ENERGÍA DE BATERÍA (+)
NOIR	>	PUISSANCE DE BATTERIE (+)
WHITE	>	GROUND (-)
BLANCO	>	TIERRA (-)
BLANC	>	LA TERRE (-)
RED	>	BRAKE SIGNAL FROM VEHICLE
ROJO	>	SEÑAL DEL FRENO DEL VEHÍCULO
ROUGE	>	SIGNAL DE FREIN DE VÉHICULE
BLUE	>	ELECTRIC BRAKE FEED TO TRAILER
AZUL	>	ALIMENTACIÓN ELÉCTRICA DEL FRENO AL ACOPLADO
BLEU	>	ALIMENTATION ÉLECTRIQUE DE FREIN AU BAS DE PAGE

English

1. Locate the vehicle's electric brake control harness connector under the dash and left of the steering column, taped to another harness near the emergency brake pedal. There will be a 4-pin connector that mates with the one on the adapter.

2. Plug the adapter harness into the vehicle's electric controller connector. Use butt connectors and attach the wires from the adapter to the corresponding wires on the electric brake control, following the brake control manufacturer's installation instructions.

3. Complete the installation per the electric brake control manufacturer's instructions and mount the unit as directed. Perform test procedures as instructed.

NOTE

Vehicles not equipped with OEM trailer tow package, may require fuses and relays to complete output and battery feed circuits (sold separately). Consult owners manual for locations.



51440

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813