

55349

JEEP GRAND CHEROKEE

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

02/20/09

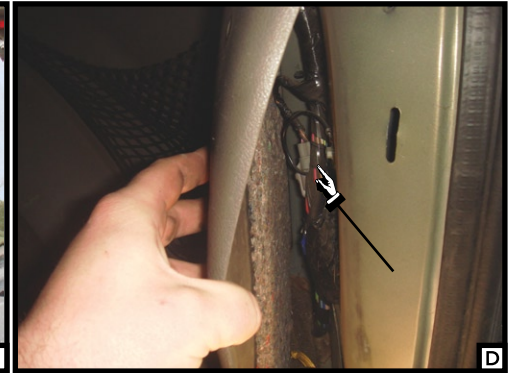

English

1. Open the tailgate and remove the spare tire. Remove the access panel on the drivers side.[\[A\]](#) Remove the rear scuff panel and cargo net brackets on both sides.[\[B\]](#) Carefully pull out the rear trim panels on both sides of the tailgate.
2. Locate the vehicles wiring harness it is located inside the access panel.[\[C\]](#) Separate the housings and insert the T-connector end with the yellow wire in-between the separated housings making sure the locking tabs are in place. On the passenger's side the vehicles wiring harness is located behind the rear trim panel.[\[D\]](#)
3. Starting on the drivers side route the T-connector end with the green wire along the backside of the rear trim panel out and under the scuff panel to the passenger's side behind the trim panel. Repeat step 2 on the passenger's side using the T-connector end with the green wire.
4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.
5. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included. Route the black wire through the rubber grommet in the tire storage area to the black converter.
6. Route the 4-flat wire to the center of the vehicle and out the hatch when in use. When not in use roll up and store in an out of the way location in the cargo area.

WARNING!
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.