

56210 CHEVROLET EQUINOX GMC TERRAIN

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

1/2/2014


English

1. Access the vehicle's wiring harness connector on the driver's side inside the cargo area at position S3 as shown in the Wiring Location Guide.
2. Open the vehicle's rear tailgate. Remove all the floor coverings (A). Remove the two cargo fasteners on the driver's side. Remove the rear scuff panel by pulling out on the bottom and then up (B).
3. On the driver's side only, partially remove the lower trim panel to gain access to the tow/trailer connector. Carefully pull outwards on the lower trim panel (C).
4. Locate the grey 4-pin tow/trailer connector mounted on the bottom rear side panel. The tow/trailer connector will be similar to that on the Connector harness. Insert the Connector harness housing into the vehicle's tow/trailer housing. Make sure the connectors are fully inserted with locking tabs in place (D).
5. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.
6. Reinstall all items removed during installation.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813



PACKAGE CONTENTS

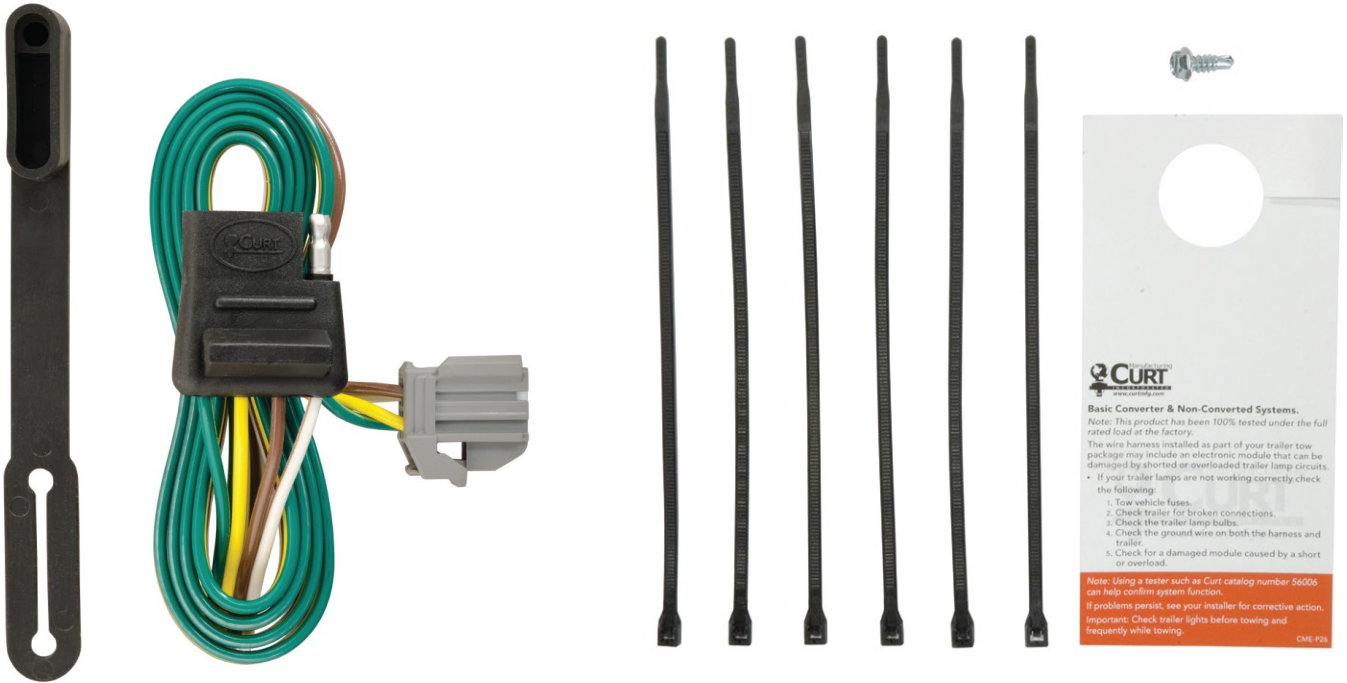

4-FLAT OEM TYPE REPLACEMENT W/INSTALL KIT