


INSTALLATION INSTRUCTIONS

DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE'S LAMP LOAD RATING, WHICHEVER IS LOWER

56223 T-CONNECTOR KIT

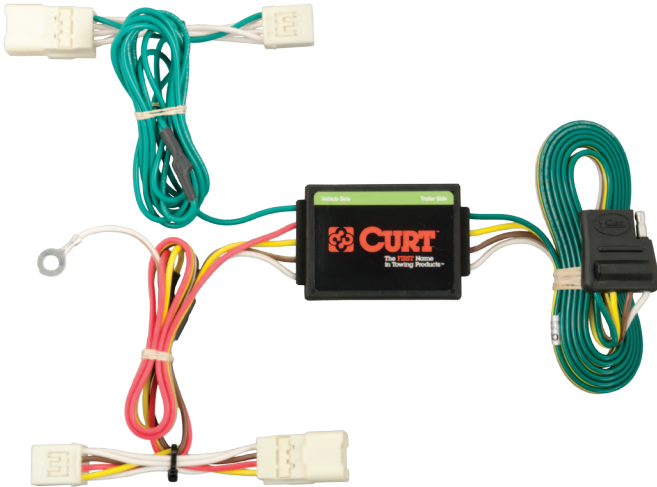

WIRING LOCATION GUIDE

PASSENGER CARS (P)

Representative vehicle shown below

- P3 - Behind driver's side taillight housing, inside of trunk
- P4 - Behind passenger's side taillight housing, inside of trunk



NOTE

All steps must be followed to ensure the T-connector will function properly. Once installed, test the function by connecting a test light or properly wired trailer.

TOOLS NEEDED

Panel puller

WARNING

Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle's lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side
Tail / Running Circuits - 7.5 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

APPLICATIONS

Make	Model
Mitsubishi	Mirage

INSTALLATION

Step 1

Access the vehicle's wiring harness connectors in the trunk behind the taillight in positions P3 and P4 as shown in the 'Wiring Location Guide'.

Step 2

Locate the vehicle's battery on the driver's side under the hood and disconnect the negative battery terminal.

Step 3

Open the trunk. Remove all trunk floor coverings (A).

Step 4

Remove the scuff panel by pulling out on the bottom, then up (B).

Step 5

Starting on the driver's side remove the push fasteners from the side trim panel (C).

Step 6

Pull back on the side trim panel to locate the vehicle's taillight wiring harness connectors (D). The connectors will be similar to those on the T-connector harness. Separate the connectors from the taillight housing, taking care not to damage the locking tabs.

Step 7

Insert the T-connector end with the yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place (E).

WARNING: Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

Step 8

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

Step 9

Route the T-connector end with the green wire to the passenger side behind the removed scuff panels. Repeat Steps 5-7 on the passenger side using the T-connector end with the green wire. Use the provided cable ties to secure any loose wires.

Step 10

Inside the vehicle, locate a flat spot that is out of the way to adhere the black converter box too. Use the double-sided tape that is provided (F).

Step 11

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in a convenient, out of the way location. Secure any loose wires with the provided cable ties.

Step 12

Reinstall all items removed during installation.

Step 12

Connect negative battery terminal.

