


# INSTALLATION INSTRUCTIONS

DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE'S LAMP LOAD RATING, WHICHEVER IS LOWER

## 56233 T-CONNECTOR KIT

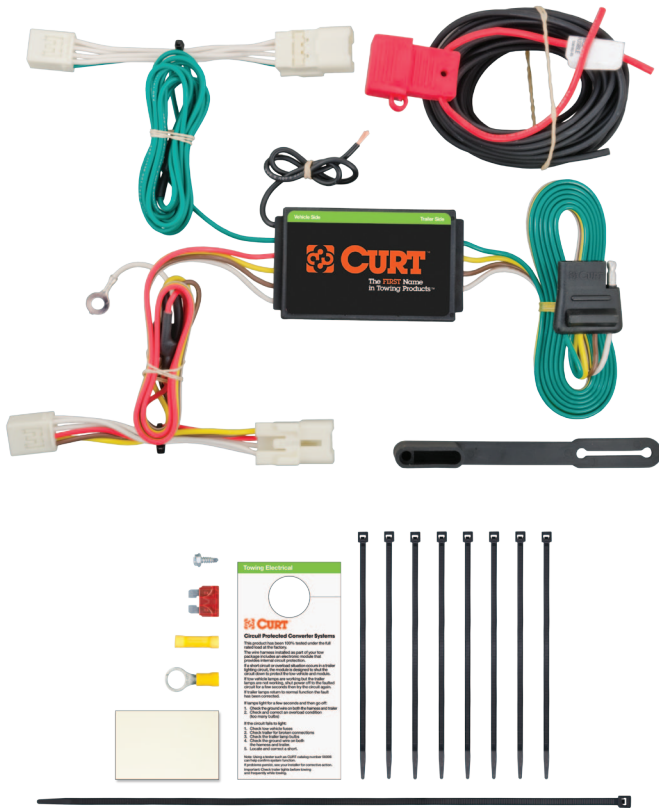

## WIRING LOCATION GUIDE

### PASSENGER CARS (P)

Representative vehicle shown below

- P3 - Behind driver's side taillight housing, inside of trunk
- P4 - Behind passenger's side taillight housing, inside of trunk



## NOTE

All steps must be followed to ensure the T-connector will function properly. Once installed, test the function by connecting a test light or properly wired trailer.

## APPLICATIONS

Make	Model
Hyundai	Elantra GT

## TOOLS NEEDED

- 10mm socket
- Ratchet
- Panel puller
- Phillips screwdriver

## WARNING

The battery connection must be fuse protected, 10 amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle's lamp load rating, whichever is lower.

- Signal Circuits - 3.0 amps per side
- Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

# INSTALLATION

## Step 1

Access the vehicle's wiring harness connectors inside the trunk behind the taillight in positions P3 and P4 as shown in the 'Wiring Location Guide'.

## Step 2

Locate vehicle's battery on the driver's side under the hood and disconnect the negative battery terminal (A).

## Step 3

Open the vehicle's tailgate. Remove all trunk floor coverings (B,C).

## Step 4

Remove trunk storage trays by removing the Phillips screws (D,E).

## Step 5

Remove the fasteners securing the rear scuff panel. Remove the scuff panel by pulling out on the bottom and then up (F).

## Step 6

Starting on the driver's side, remove the push fastener, cargo fastener and Phillips screw from the felt liner. Remove the upper plastic trim panel by removing the two 10mm fasteners (G).

## Step 7

Pull back on the felt liner to locate the vehicle's taillight wiring harness connectors (H). The connectors will be similar to those on the T-connector harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs.

## Step 8

Insert the T-connector end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place (I).

**WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

## Step 9

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

## Step 10

Route the black power wire from the vehicle's battery as shown on the included CME-PCL-INS sheet.

## Step 11

Route the T-connector end with the green wire to the passenger side behind the removed scuff panels. Repeat Steps 6-8 on the passenger side using the T-connector end with the green wire.

## Step 12

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the double-sided tape provided (J).

## Step 13

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in a convenient, out of the way location. Secure any loose wires with the provided cable ties.

## Step 14

Reinstall all items removed during install. Reconnect negative battery terminal.

