



INSTALLATION INSTRUCTIONS

DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE'S LAMP LOAD RATING, WHICHEVER IS LOWER

56246 APPLICATIONS

Make	Model
Subaru	Legacy

WIRING LOCATION GUIDE


PASSENGER CARS (P)

Representative vehicle shown below

P3 - Behind driver's side taillight housing, inside of trunk

P4 - Behind passenger's side taillight housing, inside of trunk

T-CONNECTOR KIT

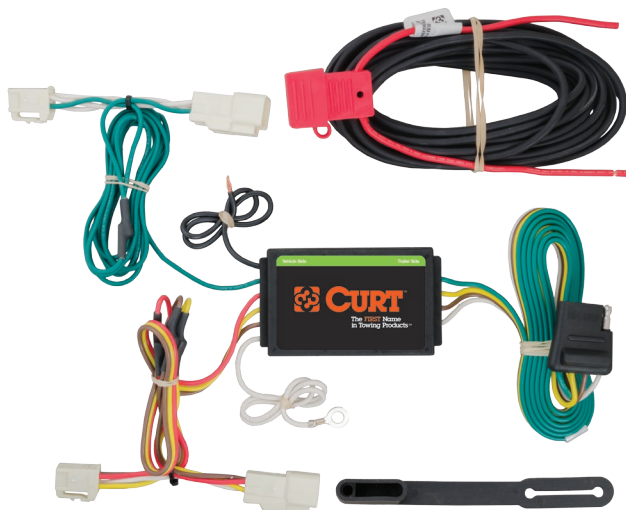

NOTE

All steps must be followed to ensure the T-connector will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

Panel trim remover tool


WARNING

The battery connection must be fuse protected, 10 amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle's lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side

Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

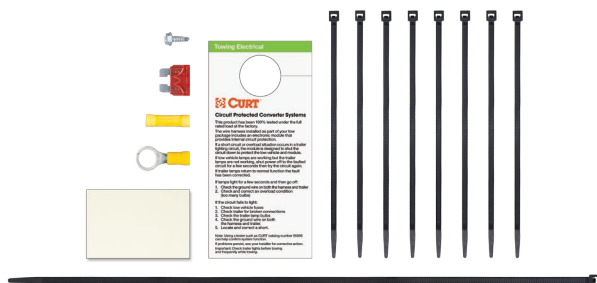

INSTALLATION

Step 1

Locate vehicle's battery on the driver side under the hood and disconnect the negative battery terminal (A).

Step 2

Open the vehicle's trunk. Remove all trunk floor coverings (B,C).

Step 3

Remove the three push fasteners securing the scuff panel (D). Remove the scuff panel by pulling up. Be sure not to damage the alignment tabs located on the back side (E).

Step 4

Starting on the driver side, remove the push fasteners and cargo fastener from the felt trunk liner (F).

Step 5

Pull back on the felt liner to locate the vehicle's taillight wiring harness connectors. The connectors will be similar to those on the T-connector harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs (G).

Step 6

Insert the T-connector end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place (H).

WARNING: Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

Step 7

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

Step 8

Route the T-connector end with the green wire to the passenger side behind the removed scuff panels. Repeat Steps 4-6 on the passenger side using the T-connector end with the green wire.

Step 9

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape (H).

Step 10

Route the black power wire from the vehicle's battery as shown on the included CME-PCL-INS sheet.

Step 11

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 12

Reinstall all items removed during install and reconnect negative battery terminal.

