



TRUE FRAME MOUNTED CAMPER TIE DOWNS

IMPORTANT OWNER-OPERATOR INSTALLATION INSTRUCTIONS

F2010/FMTPJ06FDSC

FRONT TIE DOWNS

APPLICATION FITS

2006-2007 FORD F-150 SUPERCREW SHORT BOX

CHAIN AND CLEVIS REMOVED ON 07.21.2011

Minor movement (or settling) can occur in some incidental harsh driving conditions (on or off road).

A rubber bed mat is not a requirement to maintain the lifetime warranty on a Torklift system, but a strong recommendation, simply as a safety precaution to protect the truck bed, the bottom of the camper and to give the camper additional support.

Warning!!

TORKLIFT DOES NOT RECOMMEND: Installing your truck camper in your truck on top of a drop in plastic bed liner!!! THIS WILL VOID YOUR WARRANTY!

The drop in plastic bed liners can slide on top of the truck bed surface, and the camper can slide on top of the slick surface of the bed liner. The liner can also act as a spring causing a trampoline effect increasing vertical truck camper movement, independent of the vehicle, possibly resulting in truck bed damage and/or camper damage!



REVISED vers2 BY: MWP 11/09/2012

TECH SUPPORT (800) 246-8132

**AFTER INSTALL, PLEASE GIVE
THIS BOOKLET TO YOUR CUSTOMER**

F2010 PARTS INVENTORY

- | | |
|-----------------------------------|---|
| 4 - 1/2” GRADE 5 FLAT WASHER | |
| 4 - 1/2” GRADE 5 LOCK WASHER | 2 - 16-1/2” SPECIAL STRAIGHT INSERT |
| 2 - 1/2”-13 SERRATED NUT | 2 - TIE-DOWN FRAME PLATE |
| 4 - 1/2”-13 GRADE 5 NUT | 2 - 2-5/8” USABLE LENGTH INSERT PIN |
| 4 - 1” X 2” PLATE WASHER | 2 - 1/2” X 1-1/2” X 12” UPPER SUPPORT STRAP |
| 4 - 1/2” GRADE 5 STAR WASHER | 4 - 1/2”-13 x 2” GRADE 5 BOLT |
| 2 - 1/2”-13 x 1-1/2” GRADE 5 BOLT | 1 - 1/2” BOLT FISHER |

INSTALLATION INSTRUCTIONS:

LOCATE AND INVENTORY ALL PARTS TO BECOME FAMILIAR WITH ALL BRACKETS. READ AND UNDERSTAND ALL INSTRUCTIONS. MAKE SURE THE VEHICLE IS IN PARK, ON A LEVEL SURFACE AND WHEELS ARE CHOCKED BEFORE STARTING THE INSTALLATION.

STEP 1

LOCATE THE DRIVERS SIDE SPRING PERCH, RIGHT BEHIND THE REAR CAB MOUNT. ON THE SIDE OF SPRING PERCH, THERE IS A FACTORY BOLT AND NUT. USING A 1-1/16” WRENCH OR SOCKET TO REMOVE THE NUT, **DO NOT DISCARD, YOU WILL NEED THIS NUT TO RE-INSTALL.** (WITH TENSION ON THE BOLT FROM THE WEIGHT OF THE VEHICLE, THE BOLT WILL NOT COME OUT) **SEE PHOTO A & B**

STEP 2

DIRECTLY ABOVE THE SPRING PERCH, THERE IS A BED CROSS MEMBER WITH A 1/2” HOLE NEAR THE OUTSIDE END. TAKE ONE 1/2”-13 X 2” GRADE 5 BOLT, ALONG WITH ONE 1/2” GRADE 5 STAR WASHER, AND ONE 1” X 2” PLATE WASHER AND INSERT FROM THE TOP OF THE BED CROSS MEMEBER AND DOWN INTO THE HOLE. **SEE PHOTO C & D**

STEP 3

NEXT, TAKE ONE 1/2” X 1-1/2” X 12” UPPER SUPPORT STRAP AND PLACE THE BENT SIDE UP TO THE BED CROSS MEMBER AND HAVING THE PREVIOUSLY INSTALLED BOLT GO THROUGH THE UPPER SUPPORT BRACKET. PLACE ONE 1/2” GRADE 5 FLAT WASHER, ONE 1/2” LOCK WASHER, AND ONE 1/2”-13 GRADE 5 NUT ONTO THE BOLT AND HAND TIGHTEN. **SEE PHOTO E**

STEP 4

JUST TO THE UPPER RIGHT SIDE OF THE SPRING MOUNT PERCH THERE IS A ROUND HOLE IN THE SIDE OF THE FRAME; TO THE UPPER LEFT SIDE OF THE SPRING PERCH IS AN OVAL HOLE. INSERT THE 1/2" BOLT FISHER THROUGH THIS ROUND HOLE AND TO THE LEFT, AND BACK OUT THROUGH THE OVAL HOLE. TAKE ONE 1/2"-13 X 2" GRADE 5 BOLT, ALONG WITH ONE 1/2" GRADE 5 STAR WASHER, AND ONE 1" X 2" PLATE WASHER AND CONNECT TO BOLT FISHER. ONCE CONNECTED, INSERT THE 1" X 2" PLATE WASHER THROUGH THE OVAL HOLE FIRST, THEN THE 1/2" GRADE 5 STAR WASHER, AND THEN THE 1/2"-13 X 2" GRADE 5 BOLT. PULL FASTENERS THROUGH UNTIL THE BOLT COMES THROUGH THE ROUND HOLE.

(SEE BOLT FISHER DIAGRAM) SEE PHOTO F & G

STEP 5

LOCATE THE DRIVERS SIDE TIE-DOWN FRAME PLATE, AND INSERT THE BOLT FISHER END THROUGH THE TOP HOLE. SLIDE THE TIE-DOWN FRAME PLATE AGAINST THE FRAME AND OVER THE PREVIOUSLY INSTALLED BOLT AND FACTORY SPRING PERCH BOLT. REPLACE THE FACTORY SPRING PERCH NUT AND HAND TIGHTEN.

SEE PHOTO H

STEP 6

REMOVE THE BOLT FISHER AND WHILE KEEPING A FINGER ON THE BOLT, (***SO THE BOLT WILL NOT FALL INTO THE FRAME***) PLACE ONE 1/2" GRADE 5 FLAT WASHER, ONE 1/2" GRADE 5 LOCK WASHER, AND ONE 1/2"-13 GRADE 5 NUT ONTO THE UPPER BOLT, HAND TIGHTEN. **SEE PHOTO I**

STEP 7

THE 1/2" X 1-1/2" X 12" UPPER SUPPORT BRACKET AND THE TIE-DOWN FRAME PLATE SHOULD BE CLOSE TOGETHER. WITH THE UPPER SUPPORT BRACKET FITTING INTO THE POCKET OF THE TIE-DOWN FRAME PLATE, LINE UP THE HOLES AND TAKE ONE 1/2"-13 X 1-1/2" GRADE 5 BOLT AND SLIDE IT THROUGH HOLES. THEN TAKE ONE 1/2"-13 GRADE 5 SERRATED NUT AND INSTALL, HAND TIGHTEN.

SEE PHOTO J

STEP 8

FOR PASSENGER SIDE INSTALLATION, REPEAT STEPS 1-7 ON PASSENGER SIDE.

STEP 9

TIGHTEN ALL FASTENERS TO 60 FT*LBS WITH A TORQUE WRENCH.

SEE PHOTO K

PHOTO A

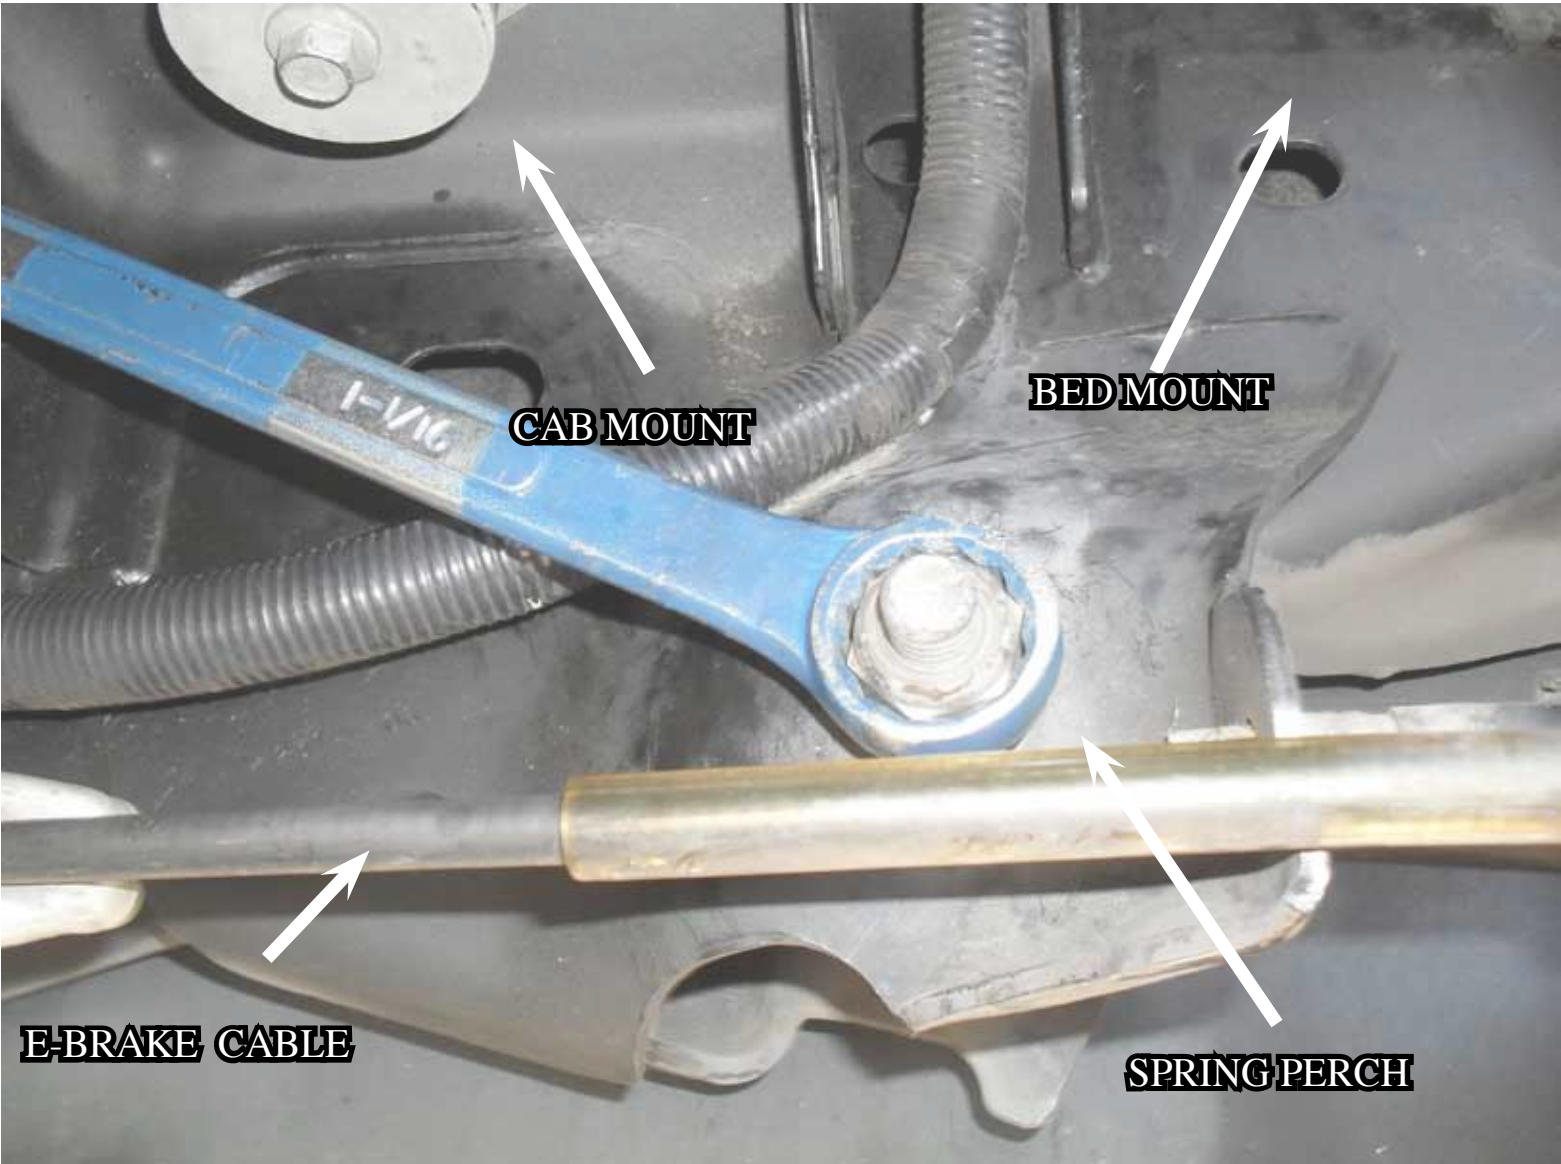


PHOTO B



PHOTO C)

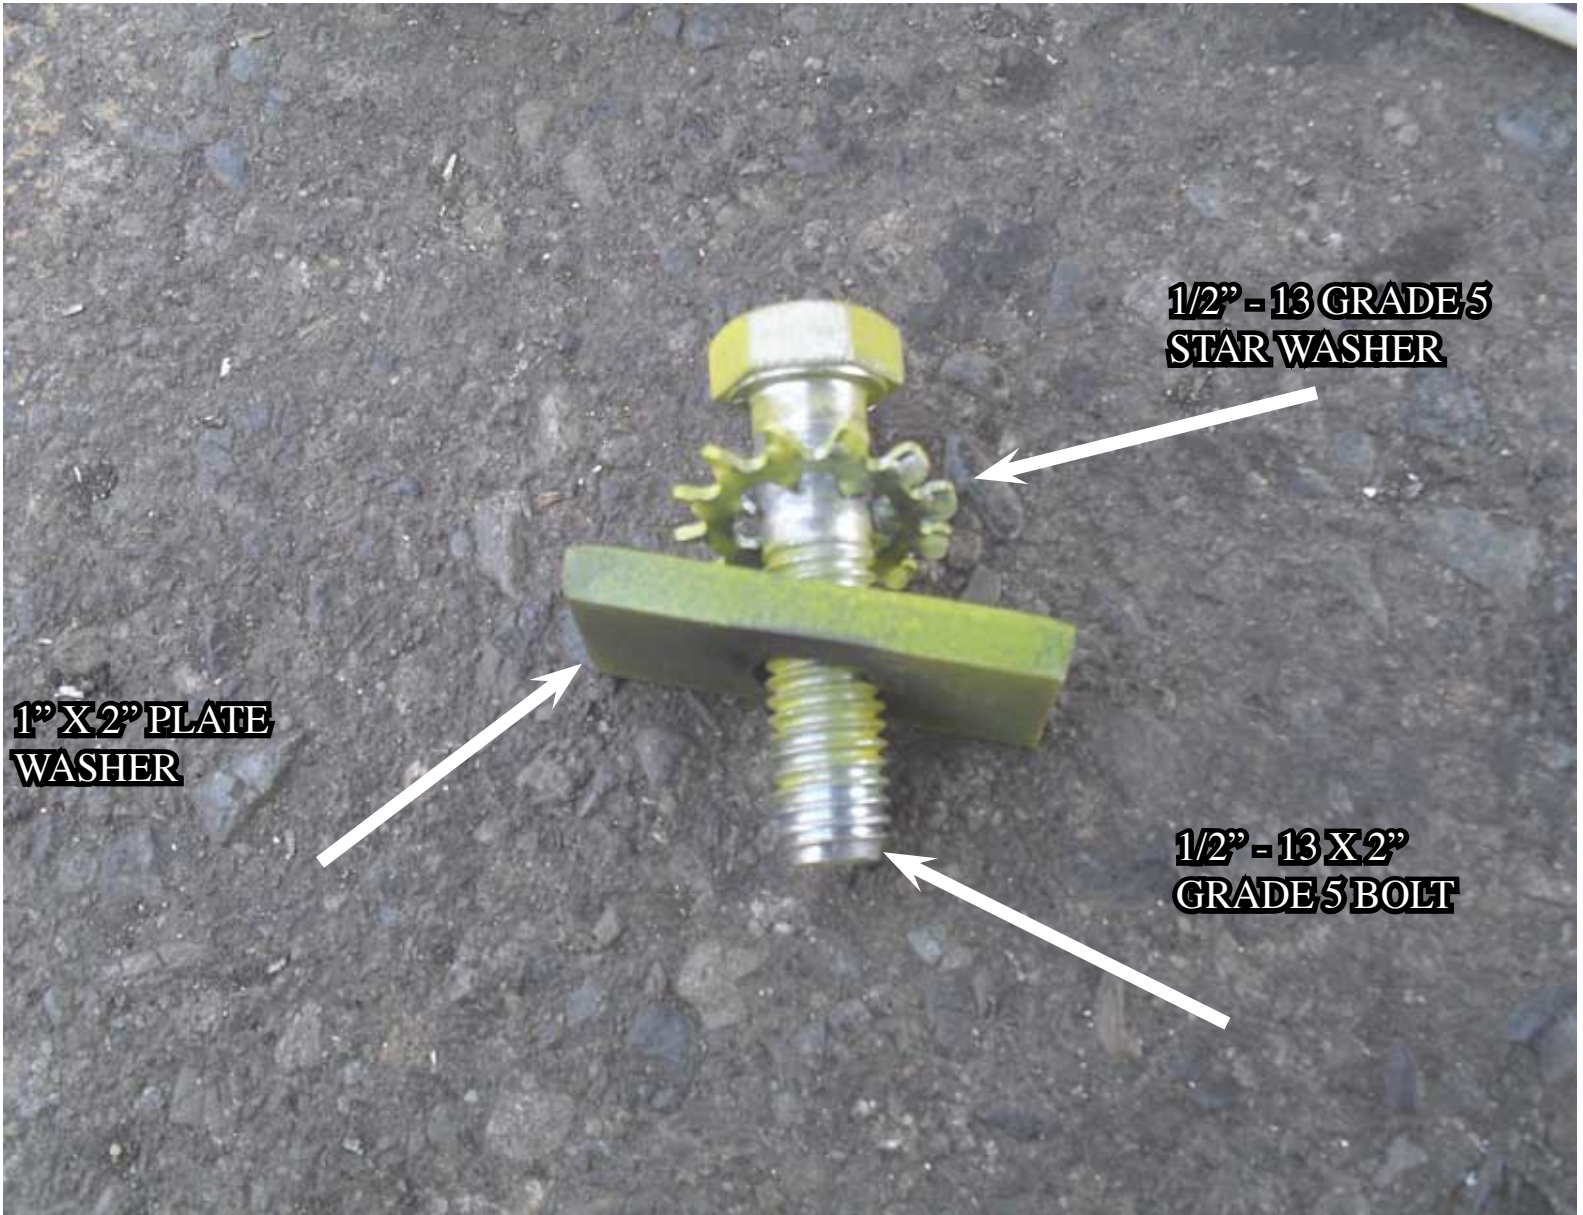


PHOTO D)



PHOTO E)

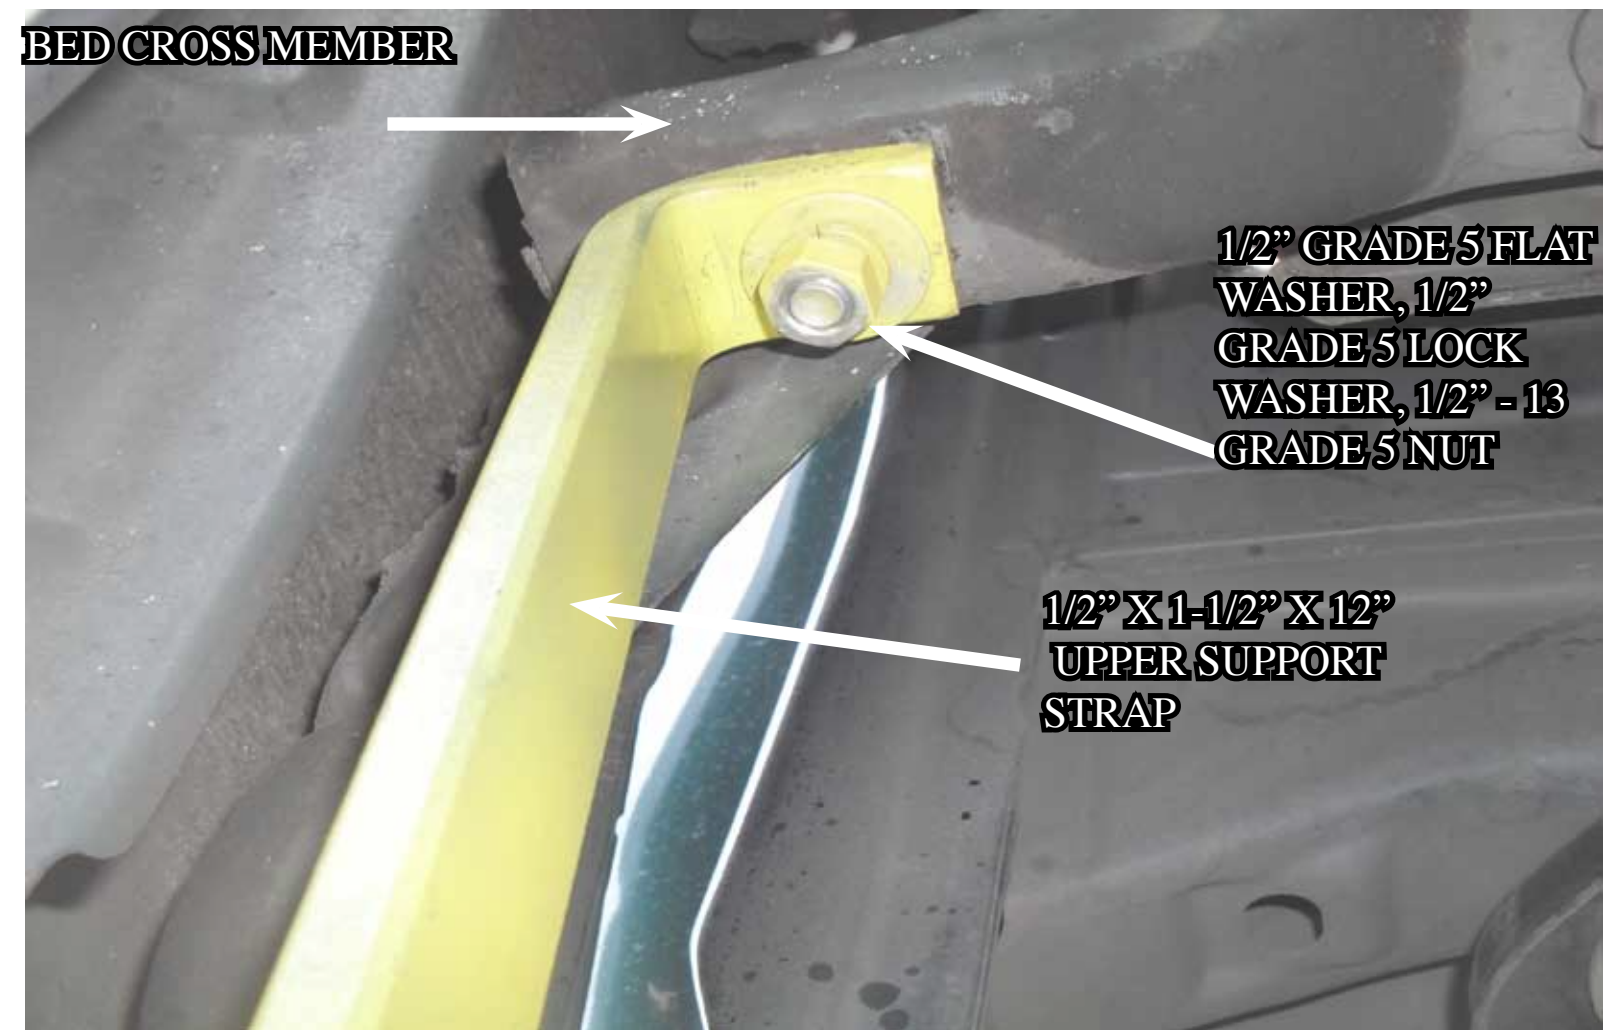


PHOTO F)

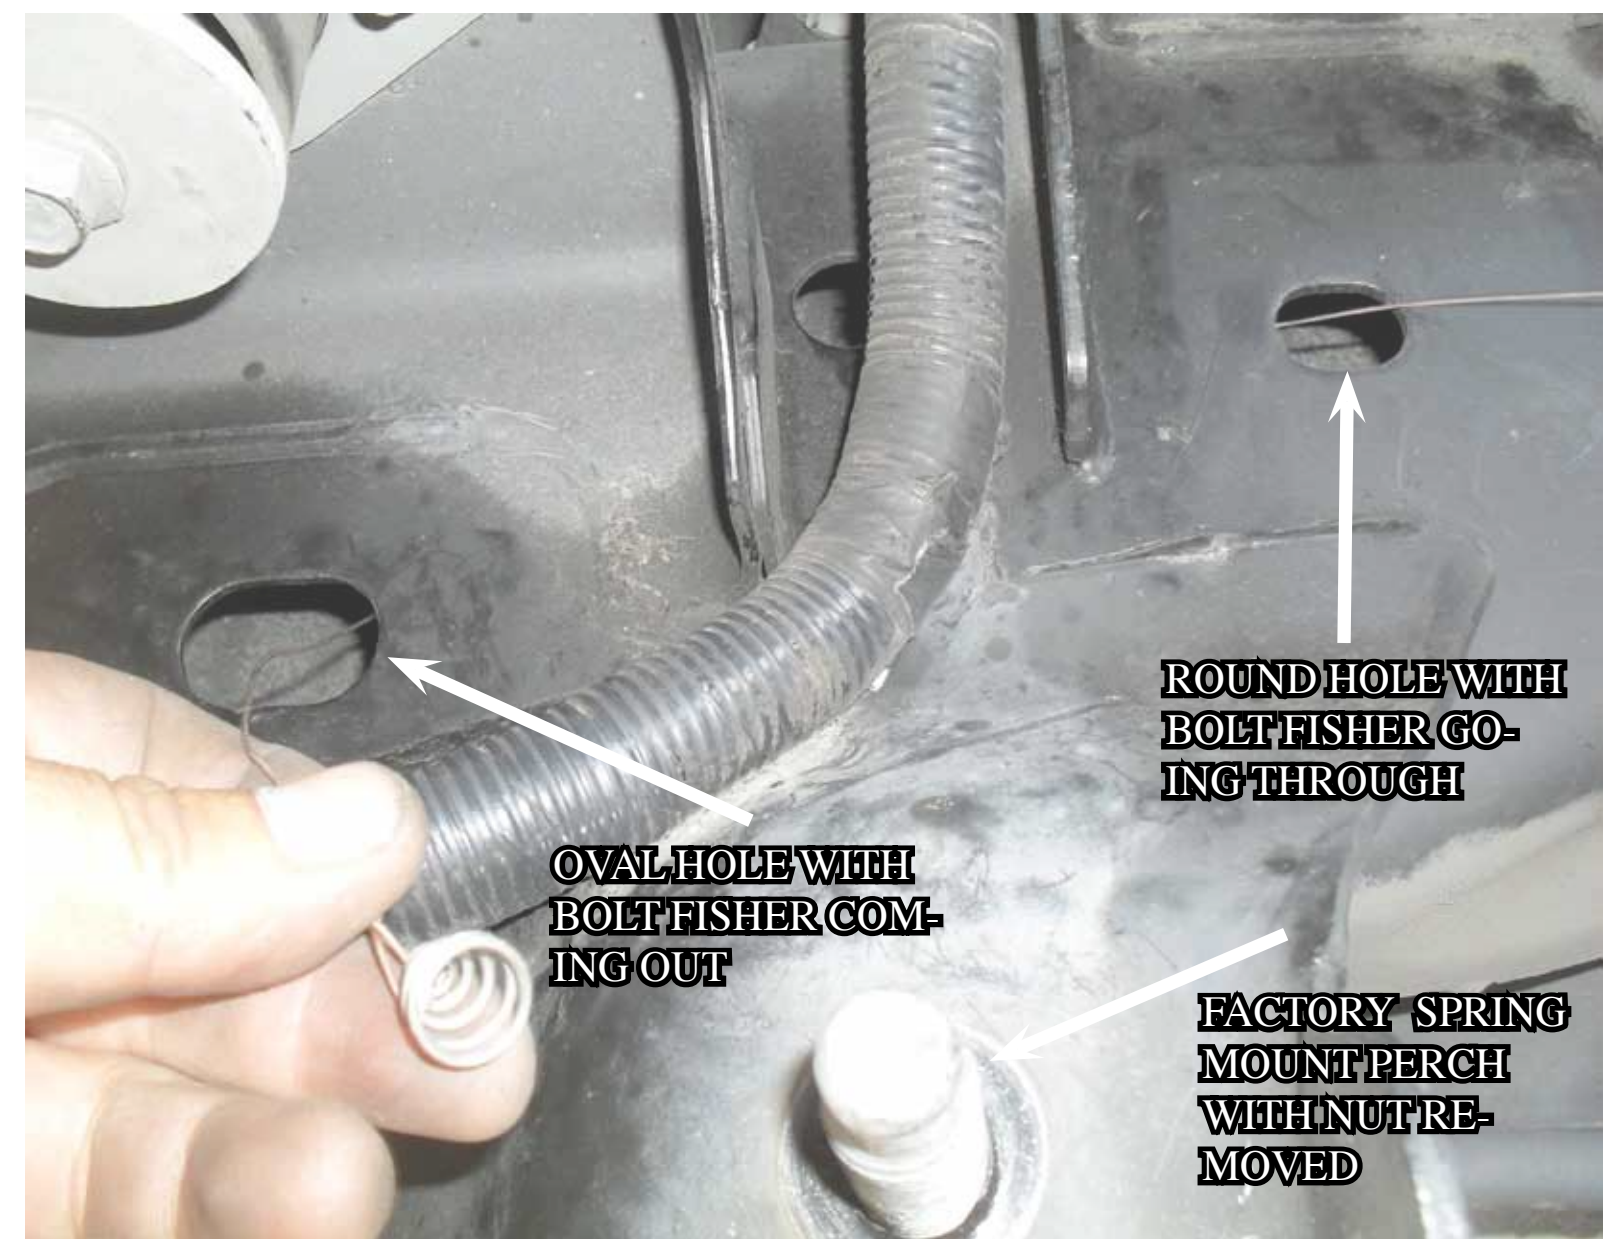


PHOTO G)



PHOTO H)



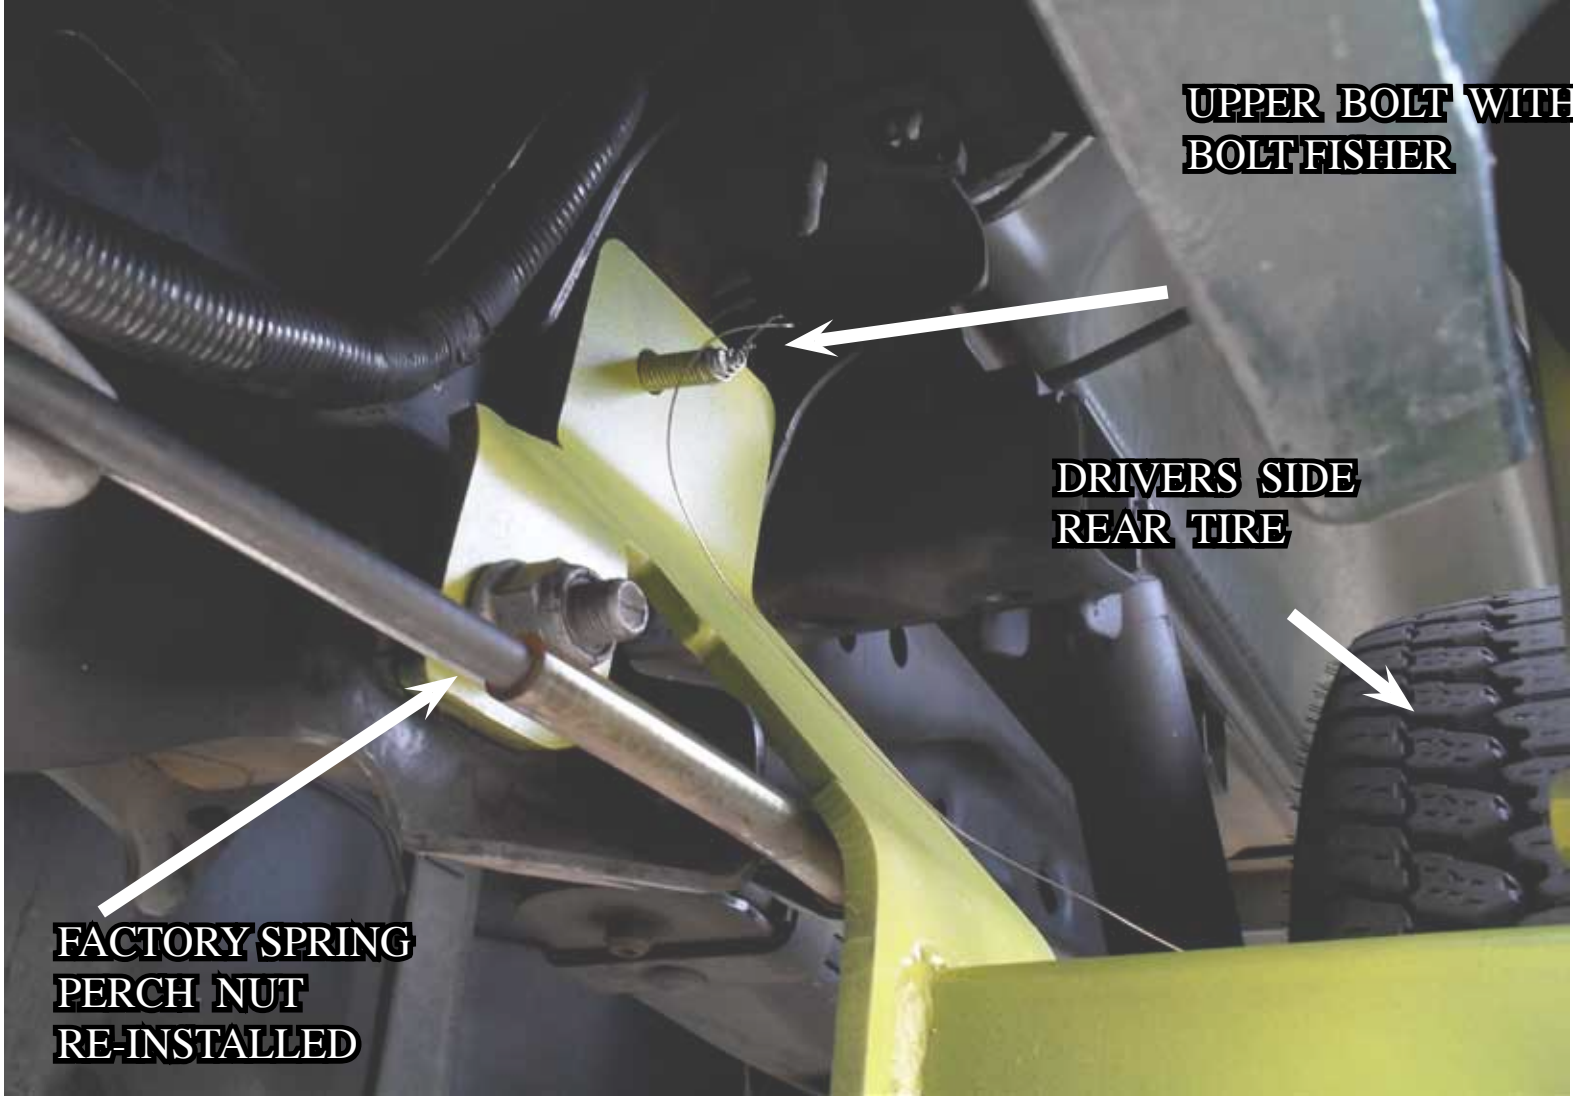


PHOTO I)

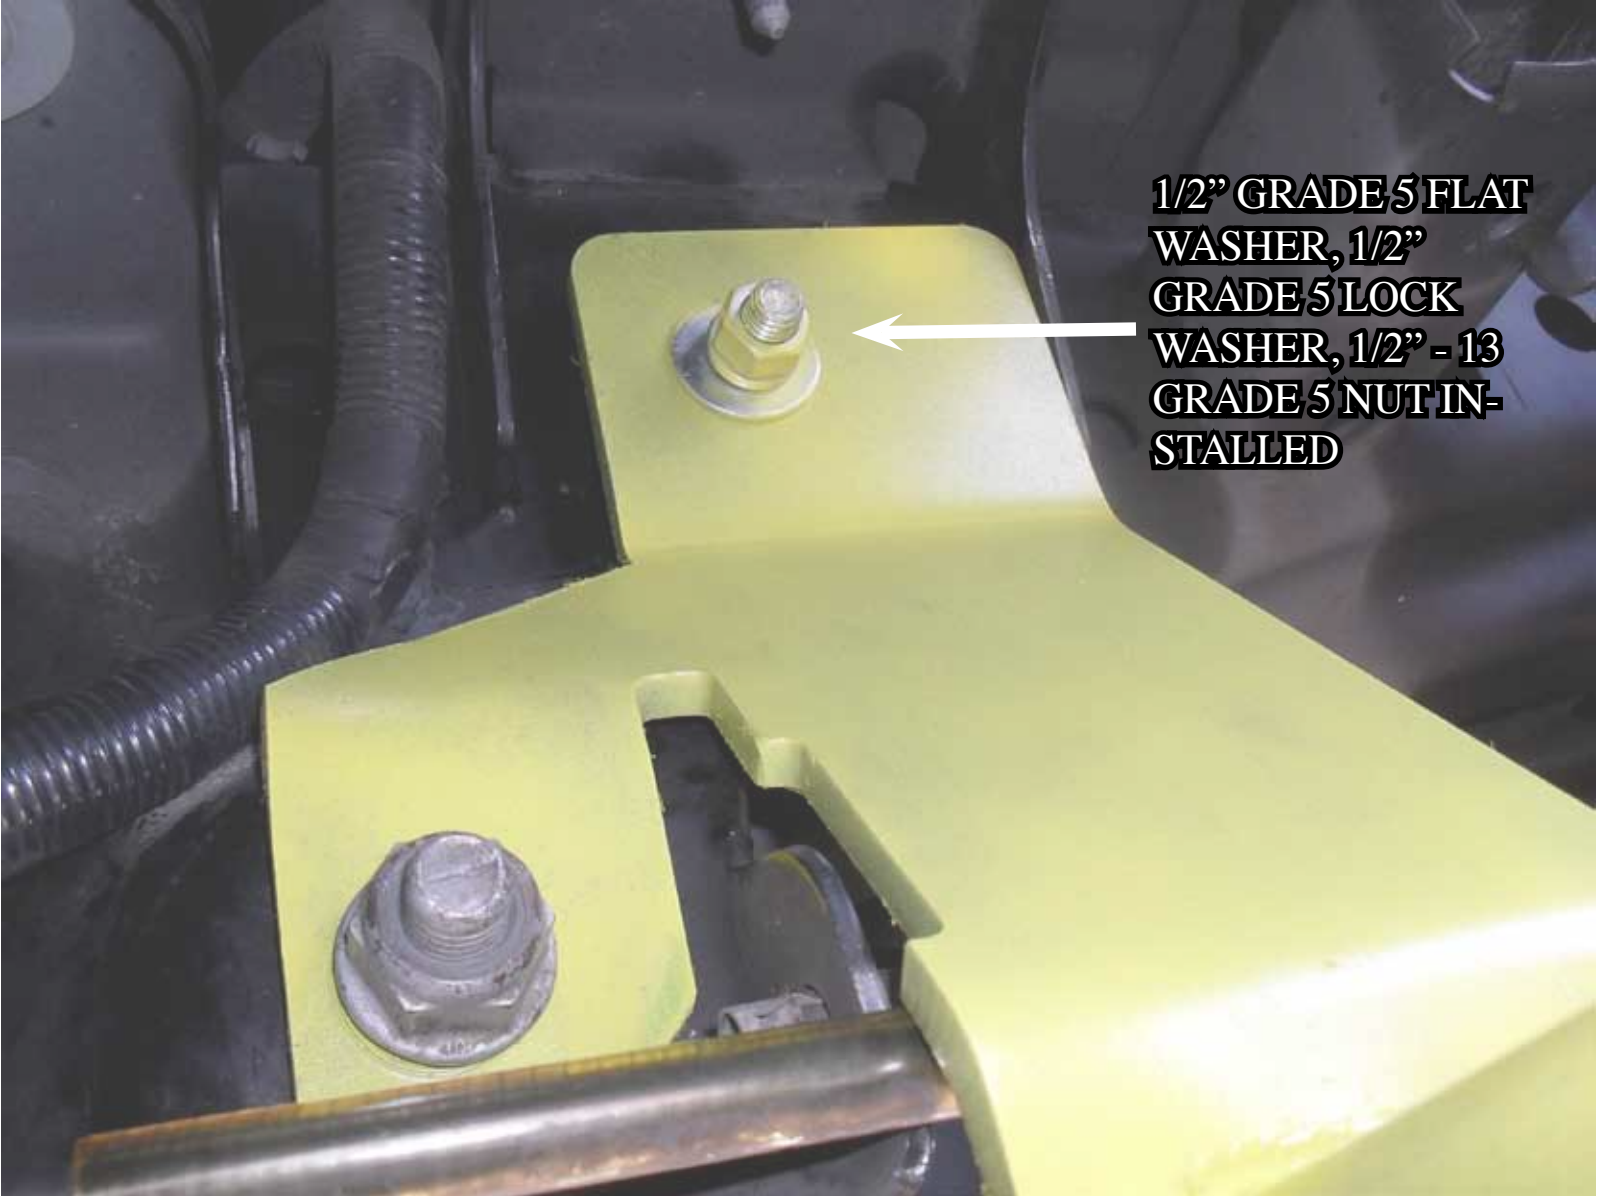


**1/2" GRADE 5 FLAT
WASHER, 1/2"
GRADE 5 LOCK
WASHER, 1/2" - 13
GRADE 5 NUT IN-
STALLED**

PHOTO J)

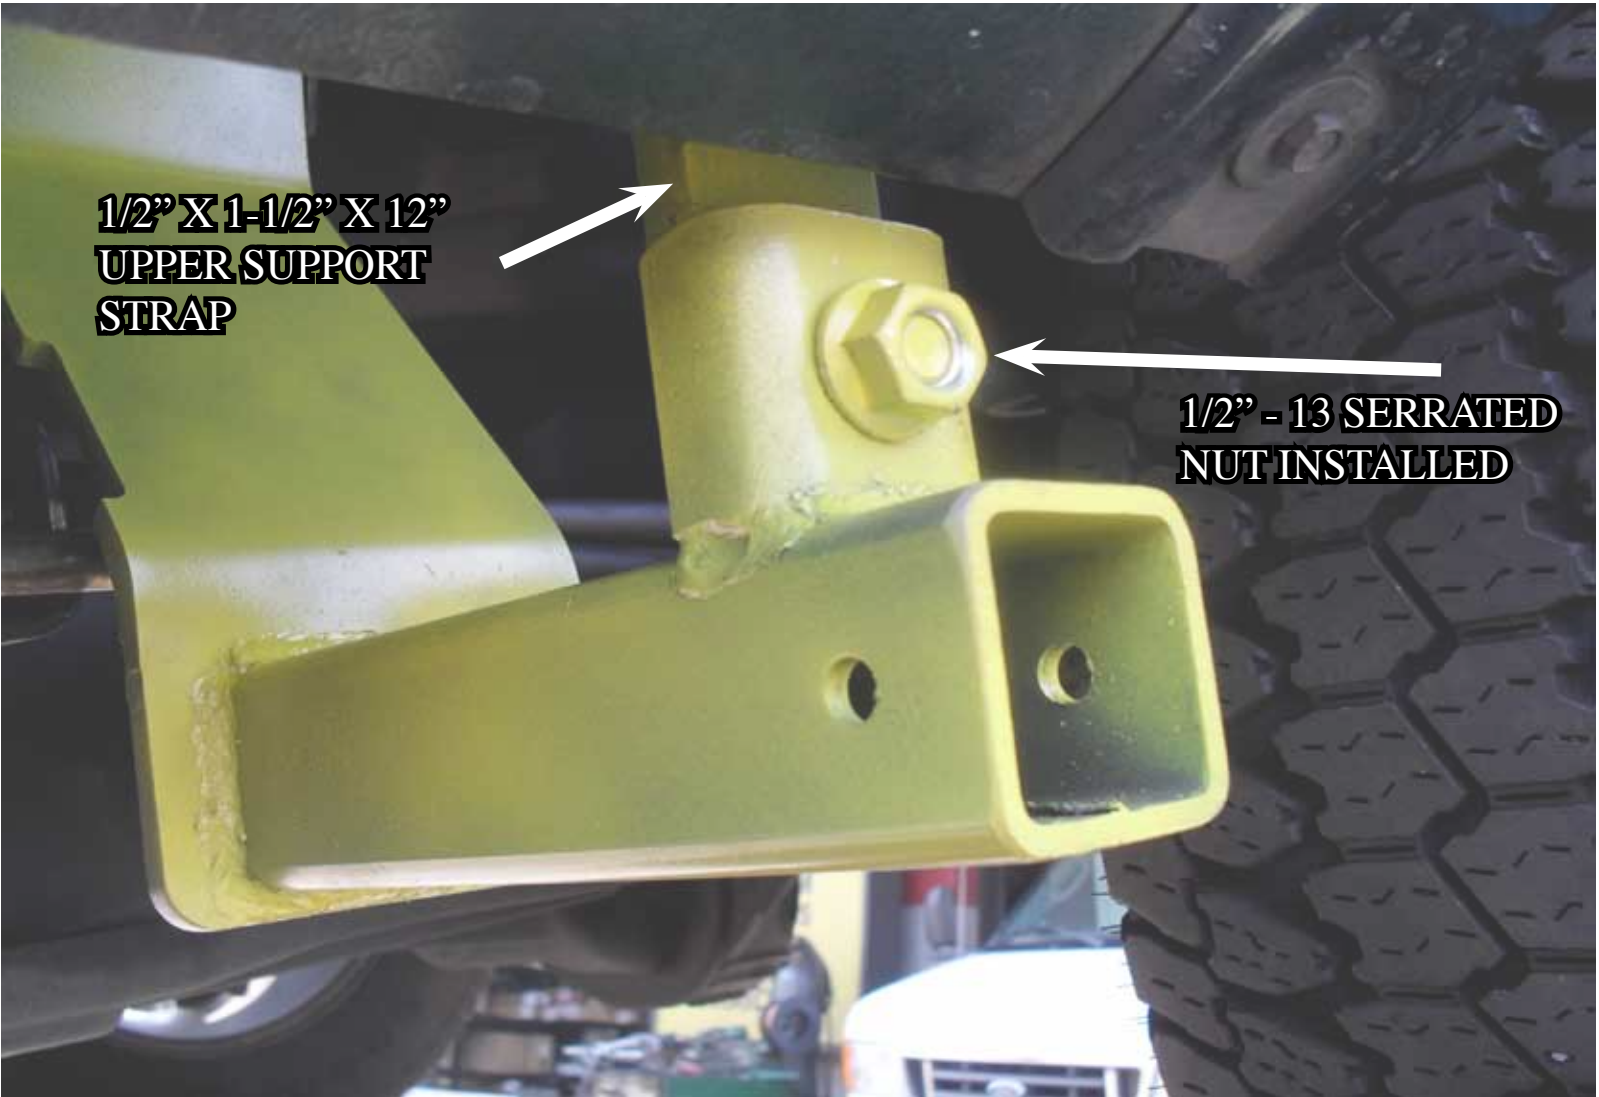

**1/2" X 1-1/2" X 12"
UPPER SUPPORT
STRAP**

**1/2" - 13 SERRATED
NUT INSTALLED**

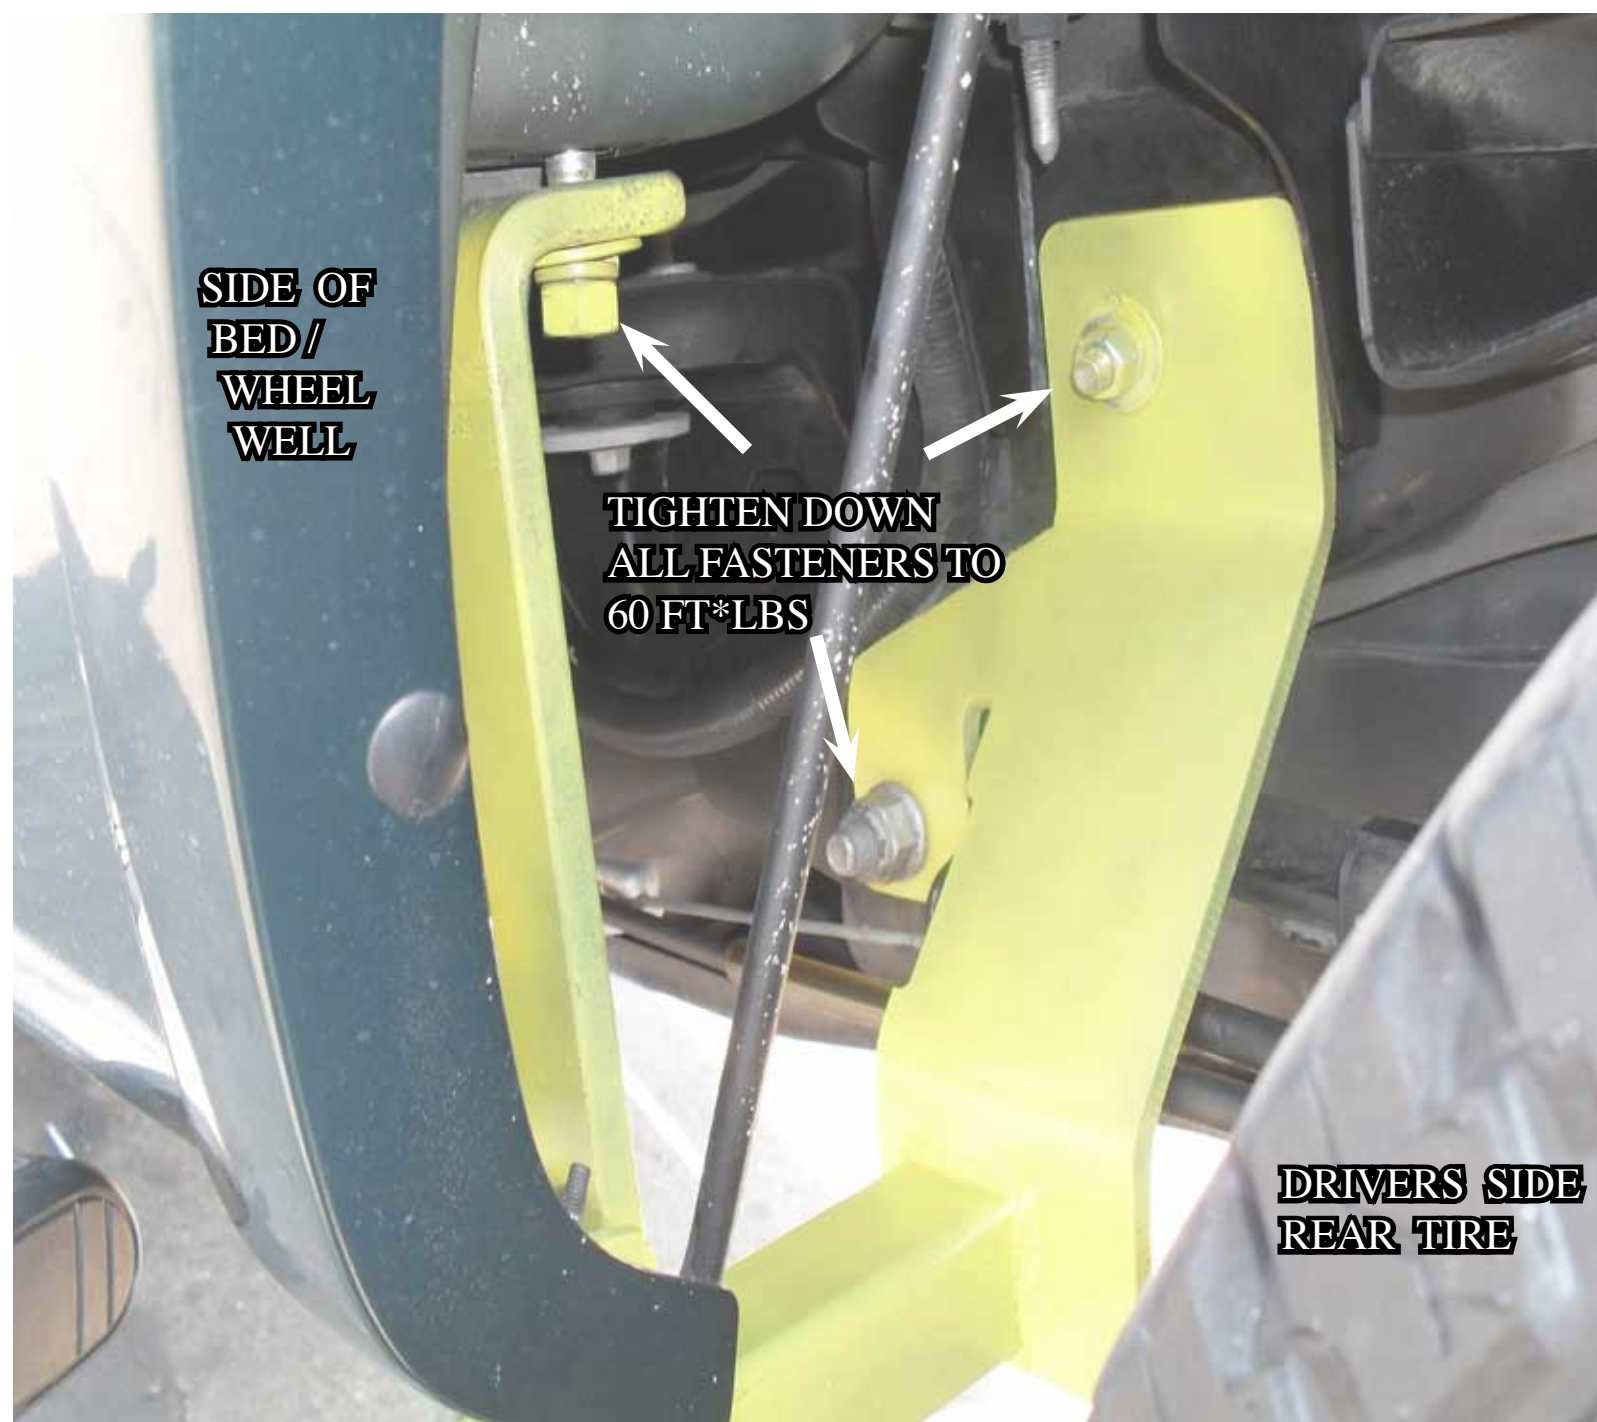

INSTRUCTIONS FOR MAINTENANCE OF POLISHED STAINLESS STEEL PRODUCTS



TorkLift utilizes quality grade 304 stainless steel in this product.

304 stainless steel is well known for its anti corrosive properties, however in some environments such as coastal regions or when in contact with some road chemicals, corrosion may occur.

We recommend occasional polishing of our product to maintain its attractive finish. Use an approved stainless steel cleaning/polishing product which can be purchased from any automotive supplier.



The advertisement features a close-up of a black plastic tie-down cover installed on a vehicle's metal frame. The cover has a white rectangular label on its side. A small black plastic expansion plug is shown being inserted into the cover. The background is a gradient of red and orange, with a bright light source at the top center.

- ▶ *Protect and Finish Off Your Tie Downs*
- ▶ *Minimizes the Effects of the Environment*
- ▶ *Kit includes: 2 cap covers, 2 expansion plugs*

Tie Down Cover

FINISHING KIT

TORKLIFT
INTERNATIONAL
Celebrating Over 35 Years

1.800.246.8132
PART #: A7009

PART NUMBER: A7009

THE LOWEST COST, MOST EFFECTIVE SUSPENSION UPGRADE AVAILABLE

"I just installed a set of StableLoads on my Ford truck. It now rides level and handles like the bed is empty. This is one of the most cost effective and efficient methods of shifting weight to the front axle and eliminating rear sag I have ever seen. Great product!"

-Michael Davis

ENGAGED

DISENGAGED

**NEW A7310 QUICK DISCONNECT
AND A7311 MODELS AVAILABLE**

QUICK DISCONNECT

STABLELOAD™

**FITS FOR FORD / DODGE / CHEVY / GMC / NISSAN
/ TOYOTA / MAZDA / MITSUBISHI / ETC.**



**CATCH PRODUCT
VIDEO**



PROUDLY MADE



GlowStep *The Ultimate Scissor Step*

"I love this thing. Its light and the steps glow in the dark. It folds up nice and I can store it inside one of my storage bays. What a difference going up and down a decent set of steps compared to those 'death trap' steps that the factories put on."

-Kerry Stark, PA



- ▶▶ LIFETIME WARRANTY
- ▶▶ GLOWS IN THE DARK FOR 10 HOURS WITH ONLY 5 MINUTES OF LIGHT EXPOSURE
- ▶▶ SELF ILLUMINATING STEPS - NO BATTERIES
- ▶▶ SAFELY ENTER AND EXIT YOUR RV AFTER DARK
- ▶▶ SUREGRIP™ STEP TREAD - NO GRIP TAPE
- ▶▶ STORES IN POSITION
- ▶▶ LOCKABLE
- ▶▶ EXCLUSIVE: ADJUSTS TO BASEMENT MODEL CAMPERS
- ▶▶ 100% ALUMINUM AND STAINLESS STEEL
- ▶▶ STAINLESS BOLTED HINGES ALLOW FOR EASY STEP ADDITION OR REMOVAL (ADD-A-STEP KIT PART # A7501)

GlowStep Lock




Part #: A7509

Add-a-Step



Part #: A7501

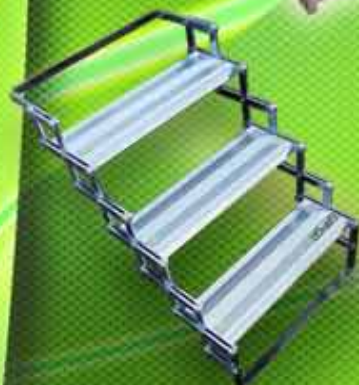

2 Step - A7502 Mounting Bracket Height -19.5"

Max Weight Cap.: 350lbs. with GlowGuide Handrail**

3 Step - A7503 Mounting Bracket Height -27"

Max Weight Cap.: 350lbs. with GlowGuide Handrail**

4 Step - A7504 Mounting Bracket Height -34.5"

Max Weight Cap.: 350lbs. with GlowGuide Handrail**

5 Step - A7505 Mounting Bracket Height -42"

Max Weight Cap.: 300lbs. with GlowGuide Handrail**

6 Step - A7506 Mounting Bracket Height -49.5"

Max Weight Cap.: 300lbs. with GlowGuide Handrail**

**** Maximum GlowStep capacity only achieved when used with GlowGuide handrail system. Maximum GlowStep capacities are 25 lbs less WITHOUT GlowGuide handrail. GlowGuide handrail system sold separately**

GLOWGUIDE MULTI-USE SAFETY HANDRAIL



- ▶▶ LIMITED LIFETIME WARRANTY
- ▶▶ ULTRA LIGHT WEIGHT (44 OUNCES)
- ▶▶ GLOWS FOR UP TO 10 HOURS
- ▶▶ FROM IN-USE TO STORAGE IN SECONDS
- ▶▶ HANDRAIL ARMS TELESCOPE FROM 32" TO 53"
- ▶▶ LOCKS TO YOUR RV
- ▶▶ UNIVERSAL MOUNTING BRACKETS
- ▶▶ DOUBLES AS WASH BRUSH
- ▶▶ PROUDLY MADE IN THE USA

**GLOWGUIDE HANDRAIL
APPLICATIONS:**
TRUCK CAMPERS
MOTORHOMES
TRAVEL TRAILERS
TOY HAULERS
5TH WHEELS & MORE

**HANDRAIL CONVERTS
INTO WASH BRUSH
IN SECONDS**



**Stores
in
Position**



**SCISSOR STEP KIT:
Part # A7600**

**UNIVERSAL RV STEP KIT
Part# A7610**

**REPLACEMENT BRUSH
ALSO AVAILABLE**



Part # A7601

***GLOWGUIDE LOCK
SOLD SEPARATE**



Part # S9600



SUPERHITCH



"(I have the) SuperHitch with 36" Extension. It's heavy, but worth it towing horses. Plus I use the Torklift tie downs AND I have always been able to get them on the phone for help when needed. To me, that is priceless."

***Jon Schuman
Pasadena, CA***



- ➔ ***Lifetime warranty***
- ➔ ***17k weight distributing***
- ➔ ***15k weight carrying***
- ➔ ***Highest ratings in the industry***
- ➔ ***No-drill (most applications)***
- ➔ ***Hardened reinforced hitch pin locations***
- ➔ ***2"x2" upper and lower receiver***
- ➔ ***Made in the USA***
- ➔ ***High penetration dual shield welding***
- ➔ ***Same capacity in upper or lower receiver***

**CATCH PRODUCT
VIDEO**



Hidden Power

Under bed auxiliary battery mount

- Yellow to show contrast, product is black

MFG #: Ford A7703
Other applications coming soon



- ▶ Add additional batteries under your truck bed
- ▶ No-drill / easy install
- ▶ Attaches and detaches quickly for battery service
- ▶ Securely clamps to truck frame
- ▶ Hidden when in use
- ▶ No loss of ground clearance
- ▶ Lifetime warranty
- ▶ High impact powder coat black
- ▶ Works with group 24 and 27 batteries

Kit Includes:

- ▶ Battery box frame mount
- ▶ Mounting fasteners
- ▶ 2 Quick disconnect 10 to 8 gauge connectors male & female 12 volt

Comes with Group 27 battery box - A7727
Comes with Group 24 battery box - A7724
No battery box included - A7703



FORTRESS



GASLOCK

***Protect expensive
propane tanks
from theft!***



Kit includes:

- One GasLock assembly
- One lock with 2 keys

$\frac{1}{2}$ " GasLock set

$\frac{3}{8}$ " GasLock set

MFG Part#

A7702

A7701

-  Allows tanks to be securely locked to trailers, towables and RVs
-  The only lock available for propane tanks in the industry

-  No tools, no modifications
-  Affordable investment
-  High impact aircraft grade aluminum

PowerArmor^{DH}

**The locking
battery box**



Battery box MFG#: A7700

Lock MFG#: S9501

- ⚡ Prevents battery theft
- ⚡ Bolts to your trailer tongue
- ⚡ Holds up to two spare batteries, group 24 or 27
- ⚡ Lifetime warranty
- ⚡ Heavy gauge diamond plate aluminum
- ⚡ Slide top for easy battery access

***Kit Includes:**

- ⚡ Battery box
- ⚡ Lock

***Batteries not included**

Frame Mounted Tie Downs

Leading the camper tie down industry in strength, quality, advanced design and installation. TorkLift TRUE frame mounted tie downs are far superior to all tie down systems available.



The TorkLift system is unique in its design and is patented. Four independent tie down points (with no belly or crossbar) working much like your receiver type trailer hitch as the inserts are removable allowing the system to be virtually undetectable when not in use.

They are designed for each make and model to fit tight to the frame so as not to compromise ground clearance. TorkLift tie downs are not universal 'one size fits all' therefore all the problems with correct fit for each particular application have been eliminated.

**VISIT WWW.TORKLIFT.COM
FOR MORE INFORMATION**

Original SuperHitch & SuperHitch Magnum

High strength extended hitch system engineered for safely towing all types of trailers behind your truck and camper. With a max towing capacity of 14,000 lbs. with an extension* , (17,000 lbs. to 20,000 lbs. without*) the Original SuperHitch and SuperHitch Magnum are rated the strongest in the industry.




CONTACT YOUR LOCAL DEALER FOR MORE DETAILS

***Weight capacity vary depending on the SuperHitch and SuperTruss extension setup.**


TORKLIFT’S BOLT FISHING GUIDE

Your guide to understanding the installation of our frame mounted tie downs.

Note: The hardware may vary as to what is being fished along with the bolt. In this instance a 1” X 2” plate washer is being fished along with the hex bolt. Different applications may require fishing through various star washers and flat washers for example.

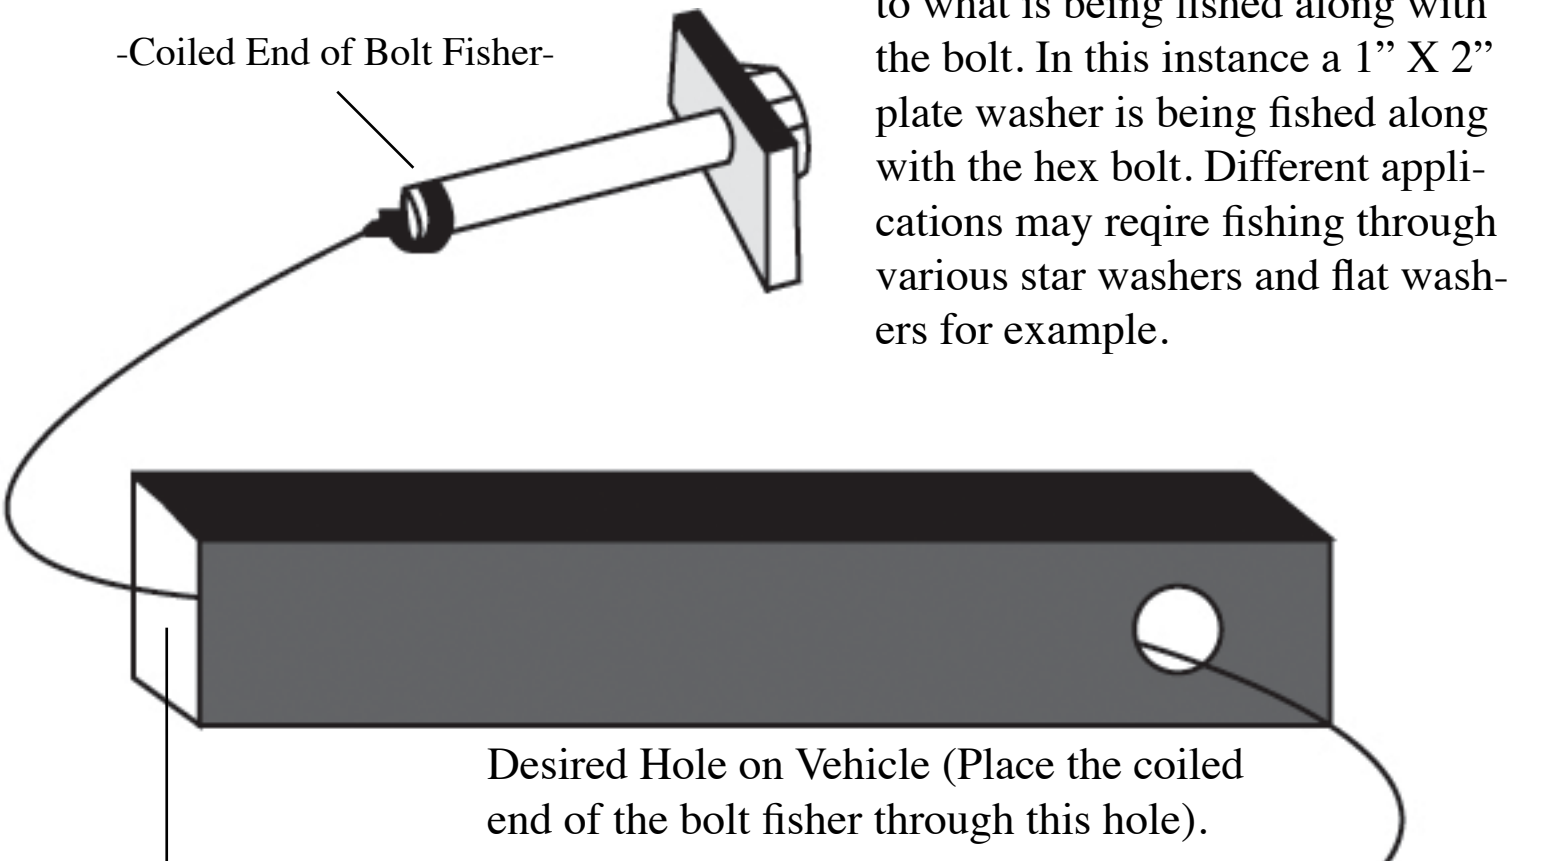

This side of the Bolt Fisher should come out of a hole where the required hardware (for example 1” X 2” plate washer) can pass through.

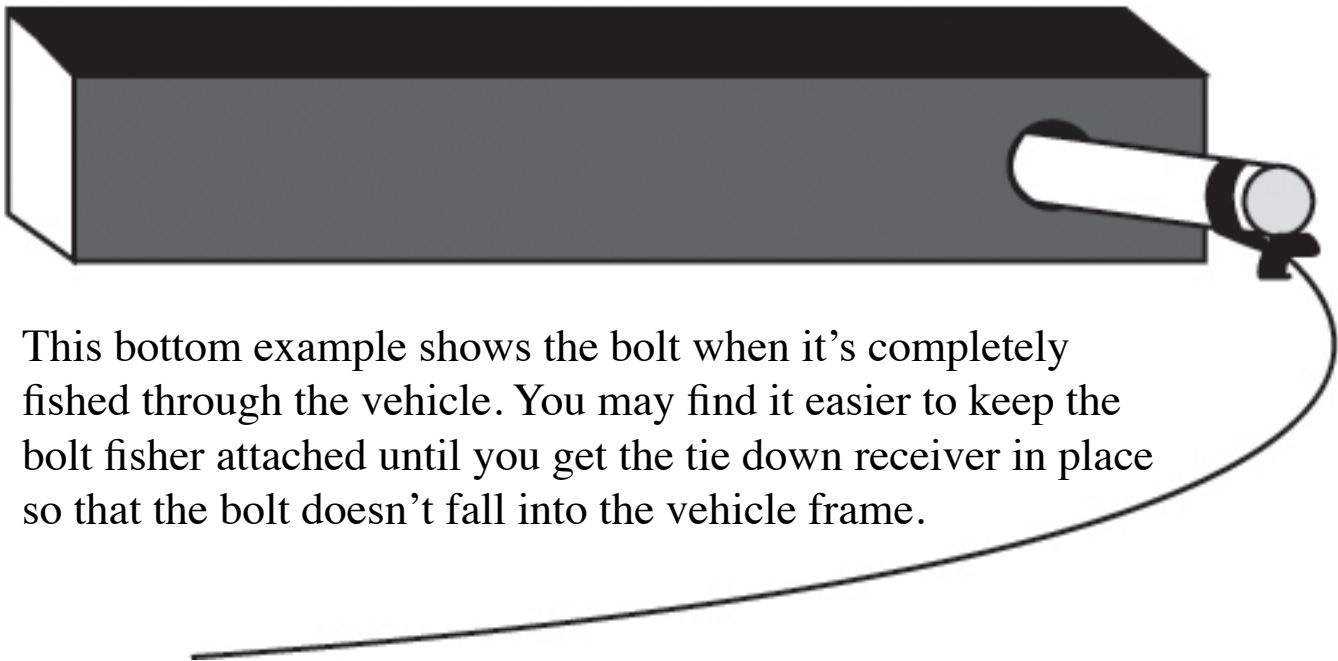


WARNING: PULLING TOO HARD ON THE BOLT FISHER CAN RESULT IN LOST FASTENERS, OR BROKEN BOLT FISHER.

TIE DOWN INSERT INSTALLATION INSTRUCTIONS


On one end of each of your tiedown inserts is a triangular plate referred to by TorkLift as a bullet plate. Your tiedown inserts should be installed with the shorter side of the bullet plate facing away from each other, i.e.. The shorter side of the front insert should point to the front of the truck and the shorter side of the rear insert should point towards the rear of the truck.

Once installed, attach the TorkLift directional stickers to the face of the bullet plate on the insert as a reminder.

DRIVERS SIDE FRONT

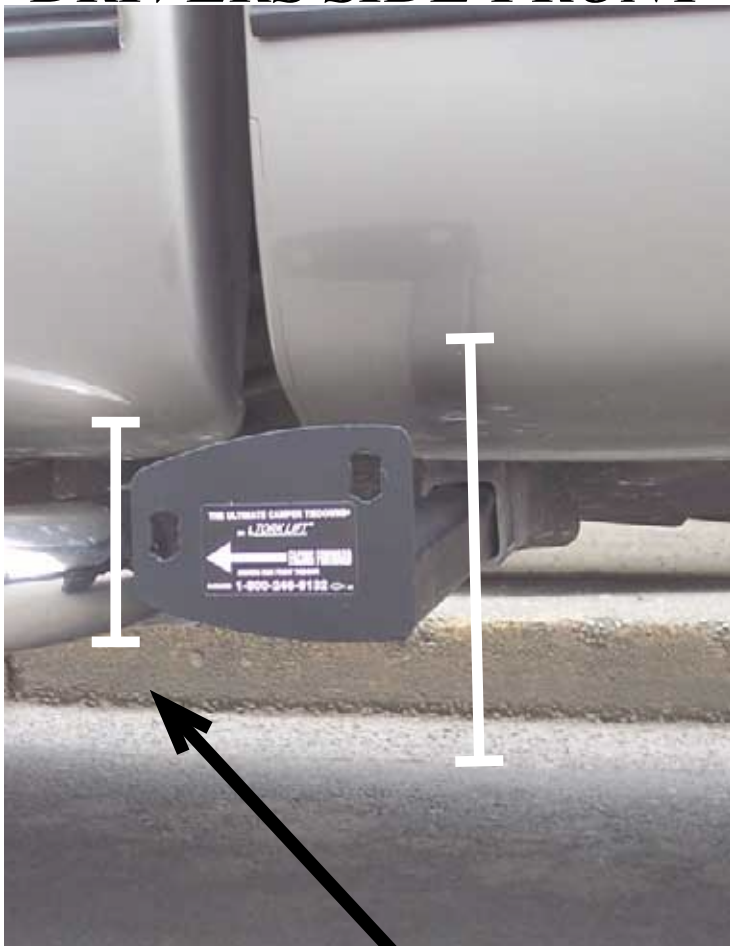

DRIVERS SIDE REAR

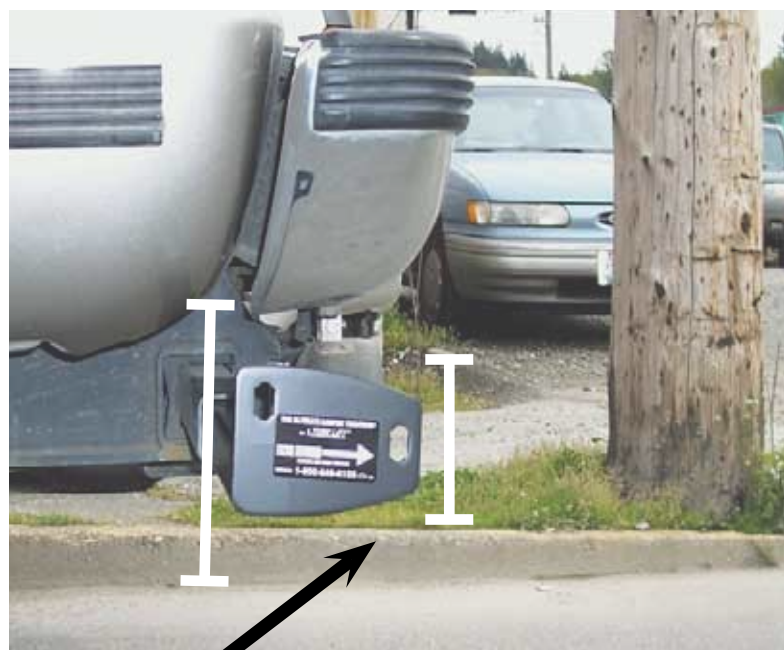

SHORTER SIDE

TURNBUCKLE SPRINGLOAD OPTIONS

CONTACT YOUR LOCAL DEALER FOR MORE DETAILS

TorkLift requires all 4 tiedown points to be spring loaded in order to qualify for our manufacturer's

Industry Exclusive "Camper Anchor" and "Truck Frame" Warranty

BASIC SPRINGLOAD KIT - S9000

**Includes 2 External Springload Cylinder Units,
2 Heavy Duty Forged Turnbuckles and 24" of Chain.
Also comes with the TorkLift Lifetime Guarantee.**



FASTGUNS LEVER ACTION TURNBUCKLES

FOR BED MOUNTED TIEDOWNS

S9520-GREY SS / S9521-WHITE SS / S9527-POLISHED SS

FOR FRAME MOUNTED TIE DOWNS

**S9522-GREY SS/ S9523-WHITE SS/ S9526-POLISHED SS
S9529-BLACK SS**

FRAME OR BUMPER MOUNTED TIEDOWNS

**Includes 2 Stainless Steel Turnbuckles with an Internal
"Set" Spring. Available in 2 Lengths and 4 Finishes
(Grey, White, Polished Stainless Steel and Black)**

Also comes with the TorkLift Lifetime Guarantee.

FASTGUN DERRINGERS Polished Stainless S9528

**Transforms Your Pre-Existing Conventional
Turnbuckles into a Lever Action
FastGun Style Turnbuckle.**

Kit includes 4 Lever Action Derringers.

Also comes with the TorkLift Lifetime Guarantee.



SPRINGLOAD XL KIT - S9050A

**This set includes 2 Long Square Bodied
Turnbuckles with an Internal "Set" Spring.**

The Springload XL Kit comes with a High Impact Powder-coated Finish and is compatible with the FastGun Derringer handles. Also comes with the TorkLift Lifetime Guarantee.



RECOMMENDED TRUCK CAMPER

INSTALLATION INSTRUCTIONS

When securing any heavy load (especially a camper) in your truck bed, your front tie down points should pull the load forward as much as possible. Some camper anchor points may differ with different manufacturers, as well as the camper jack mounting locations. Your TorkLift tie down inserts have offset triangular brackets to increase the angle of pull. These are designed to be used in the front facing forward, and the rear facing rearward but can be used in either front or rear. These recommendations are to be considered and followed as a basic rule of thumb . Obviously there will be some applications where this may not be possible. At a minimum, if opposite pull of both front and rear tiedowns cannot be achieved for whatever reason, you should have at least a forward pull at the front or rear location.

If your camper does not come with Rubber Bumpers on the front lower portion of the camper, installing Rubber Bumpers (TorkLift has Rubber Bumpers available Part A7001) or using a block of wood such as a 2 x 4 in the bed, will prevent the camper from damaging the front bulk head of the truck bed.

Minor movement (or settling) can occur in some incidental harsh driving conditions (on or off road). A rubber bed mat is not a requirement to maintain the lifetime warranty on a TorkLift system, but a strong recommendation simply as a safety precaution to protect the truck bed, the bottom of the camper and to give the camper additional support.

TORKLIFT DOES NOT RECOMMEND: Installing your truck camper in your truck on top of a drop in plastic bed liner!!! The drop in plastic bed liners can slide on top of the truck bed surface, and the camper can slide on top of the slick surface of the bed liner. The liner can also act as a spring causing a trampoline effect increasing vertical truck camper movement, independent of the vehicle, possibly resulting in truck bed, and camper damage!

INSTRUCTIONS FOR FINISH MAINTENANCE

OF TORKLIFT PRODUCTS

POWDER COATED STEEL:

To keep your TorkLift products looking good follow these guidelines. All steel powder coated TorkLift products are sandblasted for maximum adhesion and use a high quality industrial urethane based powder coat. Due to the extreme, harsh, undercar environment that your TorkLift products live in, (consistently sprayed with corrosive road chemicals such as salt, and road debris), TorkLift does not warranty the power coated finish.

To minimize corrosion from these factors on powder coated steel products, TorkLift recommends regularly cleaning and inspecting the powder coated surface and touching up any affected areas with an enamel or urethane based aerosol paint product. If there are any areas of surface rust, there are also aerosol spray rust converters available on the market that can be used as a preparation to touch-up paint application. These finish maintenance products are available at any automotive parts supplier.

POLISHED STAINLESS STEEL :

TorkLift utilizes quality grade 304 stainless steel in our stainless steel polished products. 304 stainless steel is well known for its anti-corrosive properties. However, in some environments such as coastal regions or when coming in contact with some road chemicals, corrosion may occur.

For a quick clean simply use WD40 and a cloth rag. We also recommend occasional polishing of our polished stainless products to maintain their attractive finish. Use an approved stainless steel chrome or aluminum mag wheel polish cleaning product which can be purchased from any automotive parts supplier.

Torklift International Limited

Lifetime Warranty Information

1901 Fryar Ave Sumner, WA 98390

TorkLift will require proof of purchase to register, with pictures of any defective product before issuing a replacement. TorkLift will not register any product without proof of purchase, which can be faxed, scanned, emailed, or mailed to the information provided below. TorkLift warrants it's hitches, custom hitch receivers, frame mounted tie downs, turnbuckles, and accessories (excluding wireharnesses which carry a 90 day warranty) from date of purchase against defects in material and workmanship under normal use and service for the ownership life of the original consumer purchaser. ALL COMMERCIAL APPLICATIONS ARE WARRANTED FOR A PERIOD OF 90 DAYS FROM THE DATE OF INSTALLATION/SERVICE. TorkLift will replace FREE OF CHARGE any part which proves defective in material or workmanship when presented to TorkLift, TRANSPORTATION CHARGES PREPAID by purchaser, at the address above. THIS WARRANTY IS LIMITED TO DEFECTIVE PARTS REPLACEMENT ONLY. LABOR CHARGES AND/OR DAMAGE INCURRED IN INSTALLATION OR REPLACEMENT, AS WELL AS INCIDENTAL AND CONSEQUENTIAL DAMAGES CONNECTED THEREWITH ARE EXCLUDED. This warranty does not include the finish or paint on our products. Rusting, cracking or peeling of the finish is also excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Any damage to TorkLift products as a result of misuse, abuse, neglect, accident, improper installation or any use violative of instructions furnished by TorkLift or WHEN USED IN ANY COMMERCIAL APPLICATION WILL VOID THE WARRANTY. This warranty gives you specific legal rights, and you may also have rights which vary from state to state. With warranty service, you may be able to go to a small claims court, a state court or a federal district court.



1901 Fryar Avenue Phone (800) 246-8132
Sumner WA, 98390 Fax (253) 854-8003

Or visit our website: www.TorkLift.com

Dear Valued Customer,

Thank you for making TorkLift your choice for truck, camper packages and accessories for your vehicle. By choosing TorkLift products, you have chosen a company that has been serving the RV industry for nearly 40 years and whose name has become synonymous with strength, quality and advanced design and installation.

Please take a few moments of your time to complete the Product Registration Warranty Card on the next page. When registering your newly purchased TorkLift products, you can be assured that your contact information is secure and that you and your product are getting the attention and respect that you deserve.

Thank you again for choosing TorkLift quality products.

Register for your lifetime warranty and receive a free Torklift International gift.

To Fax: Send copies of the questionnaire, warranty card and receipt to 253-854-8003

To E-mail: Send copies of the questionnaire, warranty card and receipt to warranty@torklift.com

To Mail: Send to Torklift International 1901 Fryar Ave Sumner, Wa 98390



OFFICIAL WARRANTY REGISTRATION CARD

PLEASE FILL OUT THIS FORM COMPLETELY AND RETURN TO TORKLIFT WITHIN
30 DAYS OF PURCHASE ACCOMPANIED BY A COPY OF YOUR ORIGINAL RECEIPT

TODAY'S DATE: _____

1. PART(S) PURCHASED

PART #: _____ PART #: _____

PART #: _____ PART #: _____

2. PURCHASER INFORMATION

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP / POSTAL CODE: _____

PHONE: (____) _____ - _____ EMAIL: _____

3. TRUCK INFORMATION

YEAR: _____ MAKE: _____

MODEL: _____ BED LENGTH: _____

4. CAMPER INFORMATION

YEAR: _____ MAKE: _____ MODEL: _____

5. DEALER INFORMATION

PURCHASED FROM: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP / POSTAL: _____

INSTALLED BY: ☐ OWNER ☐ ABOVE DEALER ☐ ANOTHER DEALER

IF ANOTHER DEALER, WHO: _____