



756455

UNIVERSAL 12" X 5 1/8" OFFSET FLAP MOUNTING DIAGRAM - KIT # 756455


IMPORTANT:
MANUFACTURER IS NOT RESPONSIBLE FOR NEGLIGENT USE OF VEHICLE WITH MUD FLAP INSTALLED, OR OVER TIGHTENING OF SCREWS AND BOLTS CAUSING DAMAGE TO VEHICLE OR MUD FLAPS.

INSTALLATION INSTRUCTIONS

- BEFORE YOU INSTALL YOUR MUD FLAP SET, SEE THE DIAGRAM AND PARTS LIST FOR ALL NECESSARY PARTS. CUT PROTECTIVE PLASTIC AND PEEL AWAY FROM STAINLESS STEEL. START ON DRIVER SIDE.
- CUT THE OPTIONAL RUBBER FLAP TO THE REQUIRED HEIGHT MINIMUM 11-5/16" (SEE DIAGRAM #1).
- LAY UPPER PANEL ON THE CUT RUBBER FLAP AND DRILL FOUR 1/4" HOLES FROM THE PANEL HOLES THROUGH THE RUBBER FLAP (SEE DIAGRAM #2).
- FASTEN THE PANEL AND THE BACK STRIP TO THE RUBBER FLAP WITH FOUR CAPSCREWS (SEE DIAGRAM #3).
- SQUARE THE FLAP WITH THE TIRE WHILE HOLDING THE FLAP UP AGAINST THE WHEEL WELL AND THE OFFSET FLANGE TUCK UNDERNEATH THE WHEEL WELL (SEE DIAGRAM #3).
- LOCATE THE CENTER OF THE WHEEL WELL OR WHEEL FLARE ON BACK SIDE OF THE STAINLESS STEEL PANEL AND DRILL FOUR 1/4" HOLES FROM 'A' TO 'D' ON THE STAINLESS STEEL PANEL ONLY.
NOTE: DRILL WITH CAUTION, DO NOT DRILL THROUGH THE WHEEL WELL OR WHEEL FLARE.
- SECURE THE FLAP WITH FOUR FLAT WASHERS AND FOUR TEK SCREWS ON HOLE A TO D.
- REPEAT PROCEDURE FOR THE PASSENGER SIDE.

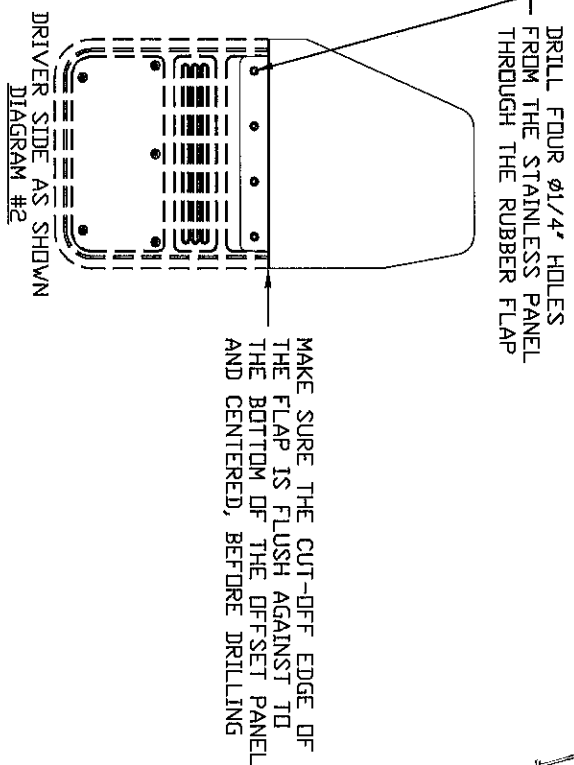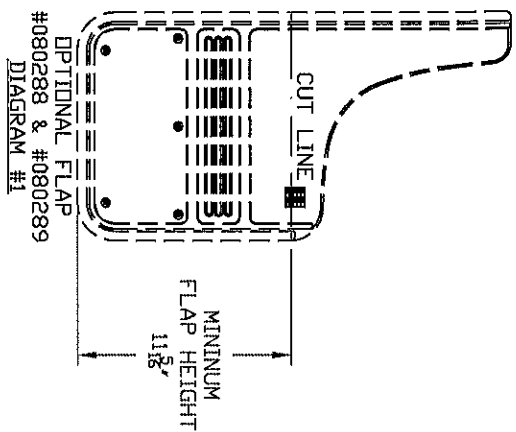

ITEM#	PART#	DESCRIPTION	QTY
6	755615	TRUCK HARDWARE OFFSET FLAP, PS, 12" X 5/8"	1
5	755614	TRUCK HARDWARE OFFSET FLAP, DS, 12" X 5/8"	1
4	755611	BACK STRIP, 12" X 2" OFFSET FLAP	2
3	018028	WASHER, FLAT, 0.281" X 1.000", 18ga. SS	8
2	012031	CAPSCREW, SS, #8-32UNC X 1/2"	8
1	010011	SCREW, TEK, 410 SS, 1/4"-14 X 1.25", HWH	8

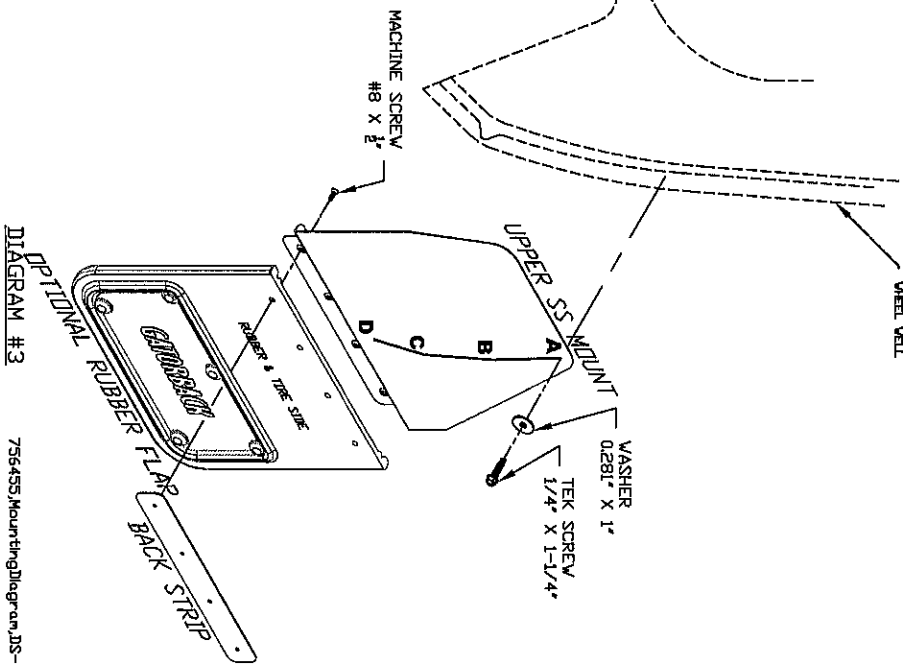

OPTIONAL RUBBER FLAP MOUNTING DIAGRAM #3

756455 Mounting Diagram DS-