

GATORBACK


756685

2011-2013, Ford Super Duty 5/8" Offset Front Upper Mount Kit Mounting Diagram & Instructions PART

IMPORTANT:

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.

TOOLS REQUIRED:

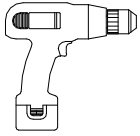


1/2" or 3/8" Drill



#2 Phillips Screwdriver



3/8" Socket Driver

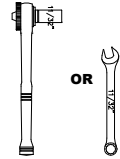

11/32" Wrench or Socket Wrench

KIT CONTAINS:

a) (1) Mount Bracket, Rear, DS
Part #755534



b) (1) Mount Bracket, Rear, PS
Part #755535



c) (2) Rear Strip, 1.0" x 12"
Part #755523



d) (8) Tek Screw, 1/4" x 1-1/4"
Part #010011



e) (8) Flat Washer, 0.281" x 1", SS
Part #018028



f) (8) Machine Screw, #8-32 x 1/2", SS
Part #012031




INSTALLATION

For ease of installation, it is suggested that the wheel be removed.

1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Cut the protective plastic and peel away from the stainless steel. Start on the driver's side.
2. Remove two factory screws #5 & #6, on the wheel well as shown on the diagram. Reinstall the two factory screws on holes #2 & #4. Loosely secure at this point.
3. Square the flap with the tire and push the flap up against the wheel well.
4. Now tighten the two factory screws on holes #2 & #4. Secure the flap with two (2) tek screws and two (2) flat washers on holes #1 & #3.

REMOVE THE FACTORY SCREWS AND REINSTALL THROUGH THE STAINLESS STEEL PANEL HOLES #2 AND #4

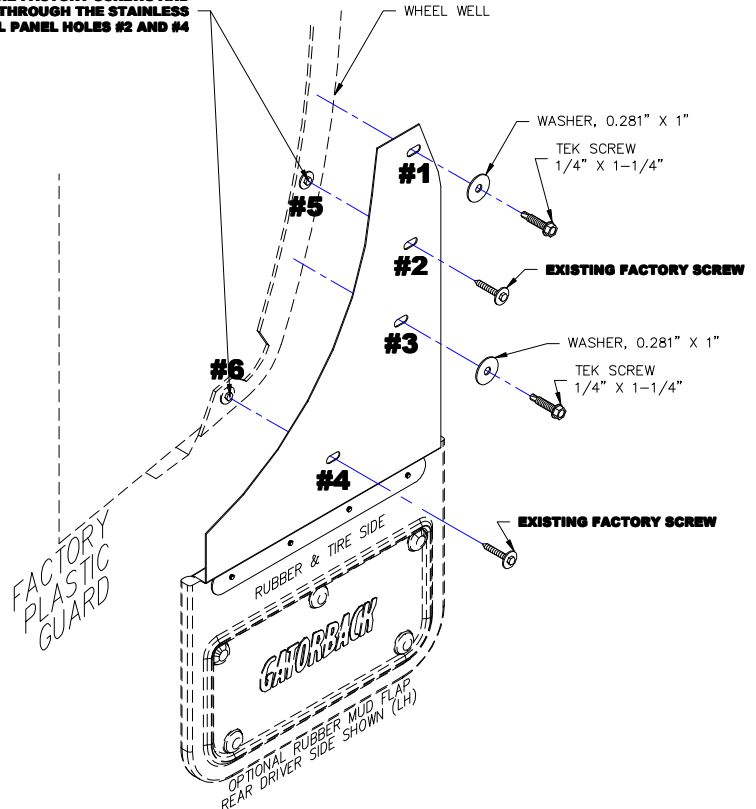

✓ Check all fasteners for tightness. Repeat procedure on the other side.