




# 2010 - 2013, Dodge Ram 5/8" Offset, Rear Upper Mount Kit Mounting Diagram & Instructions Part #756688

## IMPORTANT:

*The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.*

## TOOLS REQUIRED:

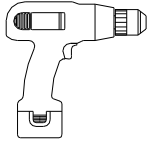


Electric or Re-Chargeable  
1/2" or 3/8" Drill



#2 Phillips Screwdriver




5/16" socket driver

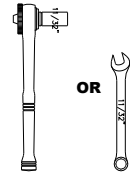


11/23" Open End Wrench  
or Socket Wrench

## KIT CONTAINS:


a) (1) Mount Bracket,  
Drivers Side  
Part #755740

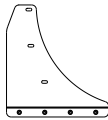

b) (1) Mount Bracket,  
Passenger Side  
Part #755741

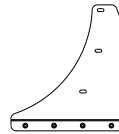

c) (2) Rear Strip  
1" x 12", SS  
Part #755523

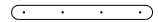

d) (8) Machine Screw  
#8-32 x 1/2", SS  
Part #012031



e) (2) Tek Screw  
#10 x 1", SS  
Part #010009



f) (2) Washer, Flat  
0.203 x 1", SS  
Part #018031




## INSTALLATION

*For ease of installation, it is suggested that the wheel be removed.*

1. Before you install your mudflap set, see the diagram and parts list for all necessary parts. Cut protective plastic and peel away from stainless steel. Start on the driver's side.
2. Remove two factory screws on the wheel flare or wheel well as shown on the diagram and re-install the two factory screws on hole #1 and #3 through the factory holes #4 and #5, loosely secure at this point.
3. Square the flap with the tire while putting pressure against the wheel flare.
4. Now tighten the two factory screws on holes #1 and #2. Then secure the flap with a Tek Screw #010009 and a flat Washer on hole #2.



**REMOVE THE FACTORY SCREWS AND REINSTALL THROUGH THE STAINLESS STEEL PANEL HOLES #1 AND #3**

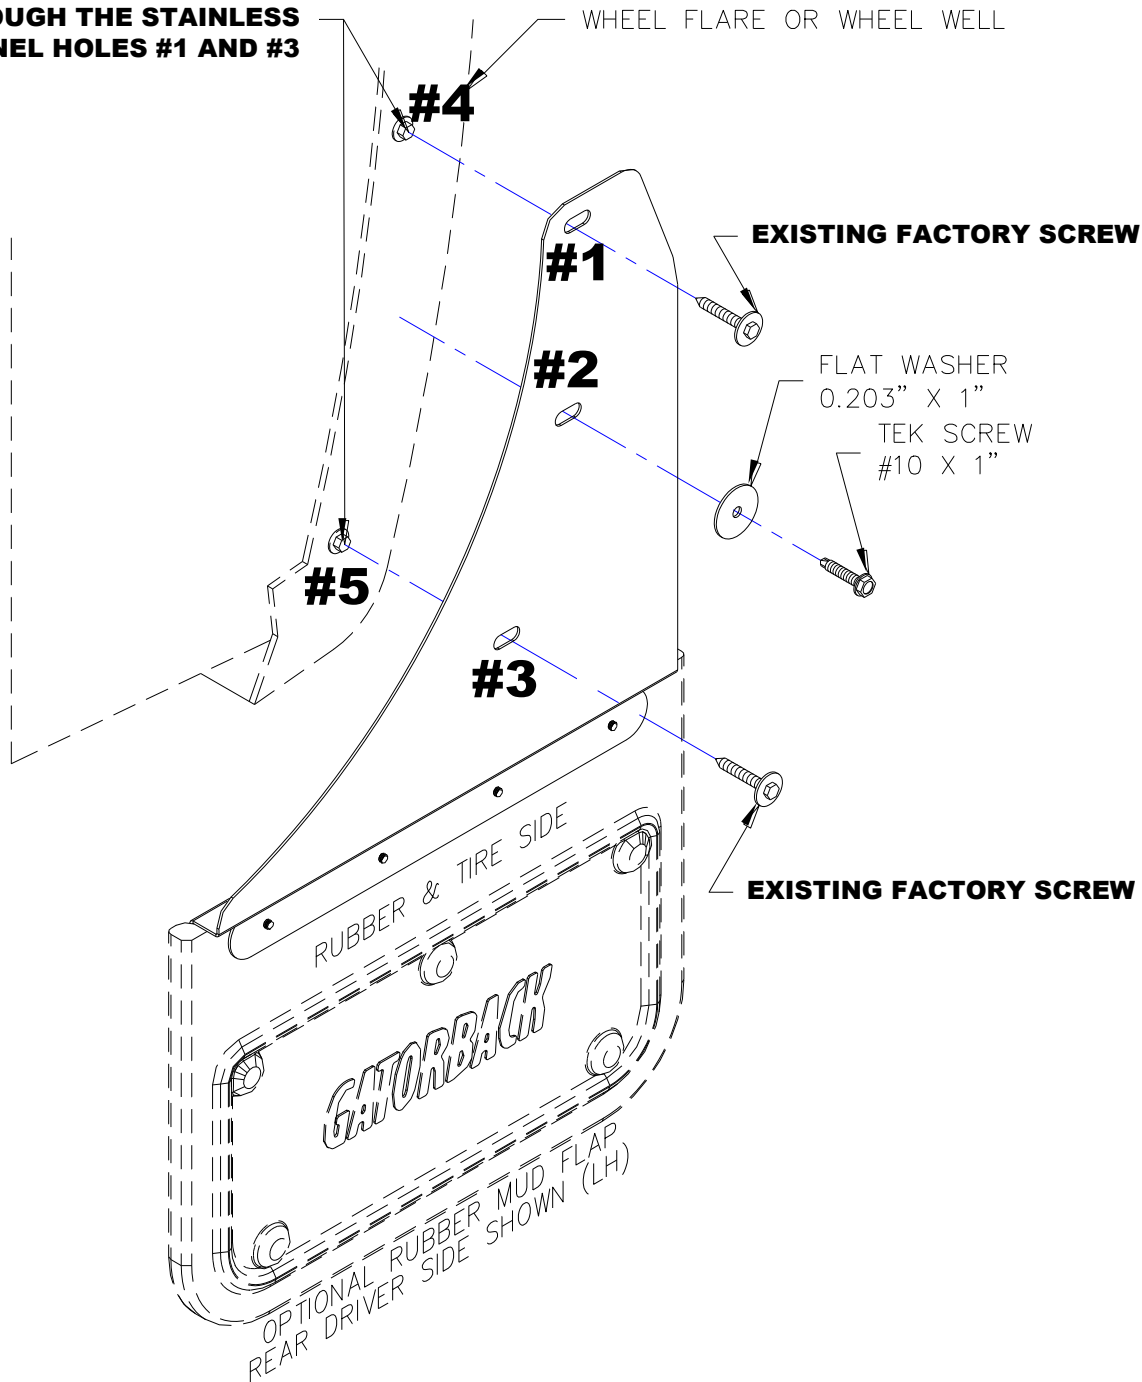

✓ Check all fasteners for tightness. Repeat procedure on other side