



**2014, GMC, Front 12”  
5/8” Offset, Mud Flap Set  
Mounting Diagram & Instructions  
Part# 756820**

**IMPORTANT:**

**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.**

**NO-DRILL SYSTEM**


**TOOLS REQUIRED:**



*Electric or re-chargeable  
1/2” or 3/8” drill.*



*1/4” Drill Bit*




*5/16” Socket Driver  
& 3/8” Open Wrench*



*#15 Torque Screwdriver*

**SCREWS / WASHERS / FLAPS - PARTS BAG # 750579**

*a) (1) Flap Assembly,  
Driver’s Side*



*b) (1) Flap Assembly  
Passenger Side*



*c) (2) Hex Nut, SS  
#10  
Part # 025003*



*d) (4) Washer, Flat, SS  
0.203” x 1.00”  
Part #018031*



*e) (2) Washer, Lock  
#10  
Part #024001*




*f) (2) Machine Screw, SS  
#10-24 x 1”  
Part # 012022*




**INSTALLATION:** *(For ease of installation it is suggested that the wheel be removed)*

1. Before you install your Mud Flap set, see the diagram and parts list for all necessary parts. Cut the protective plastic and peel away from the stainless steel. Start on the driver’s side.
2. Remove three (3) factory screws on the wheel well as shown on the diagram and reinstall the three (3) factory screws on holes #1 to #3, through the factory holes #5 to #7. Loosely secure at this point.
3. Square the flap with the tire while putting pressure against the wheel well and tighten the three (3) factory screws on holes #1 to #3.

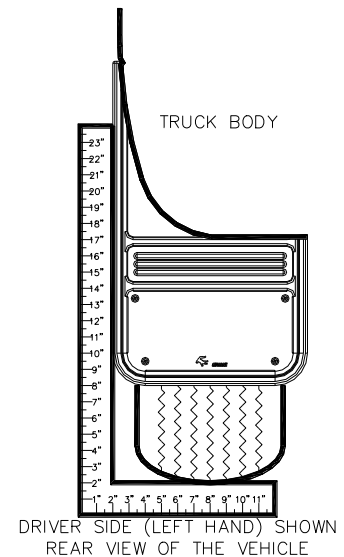

4. Drill 1/4" hole (1) from hole #4 through the factory plastic liner and secure with a Machine Screw, two flat washers, one lock washer and one hex nut.
5. Repeat procedure for the passenger side.

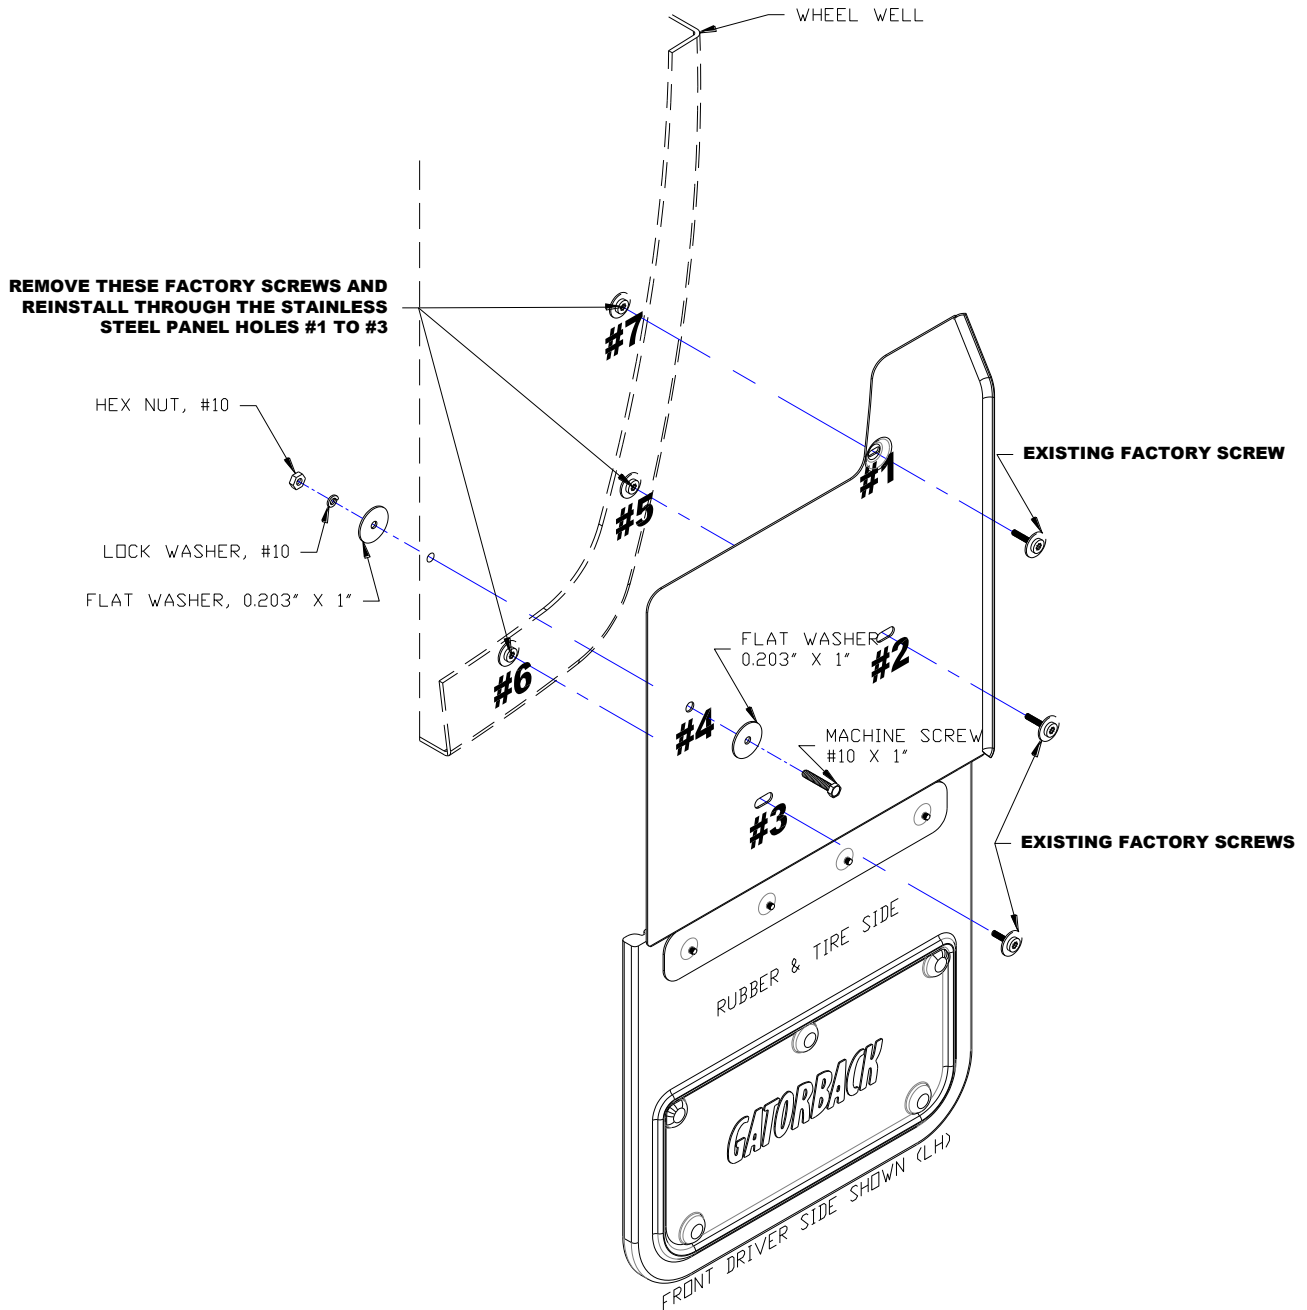

**IMPORTANT:**

Manufacturer is not responsible for negligent use of vehicle with Mud Flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.