


**Important:**


**Manufacturer is not responsible for negligent use of vehicle with Backup Sensor installed, including over-tightening of screws and bolts causing damage to vehicle or Backup Sensor.**

**INSTALLATION INSTRUCTIONS**

Before you install your **PRECISION Backup Sensor Guard**, see the Diagram for all necessary parts and bolts.

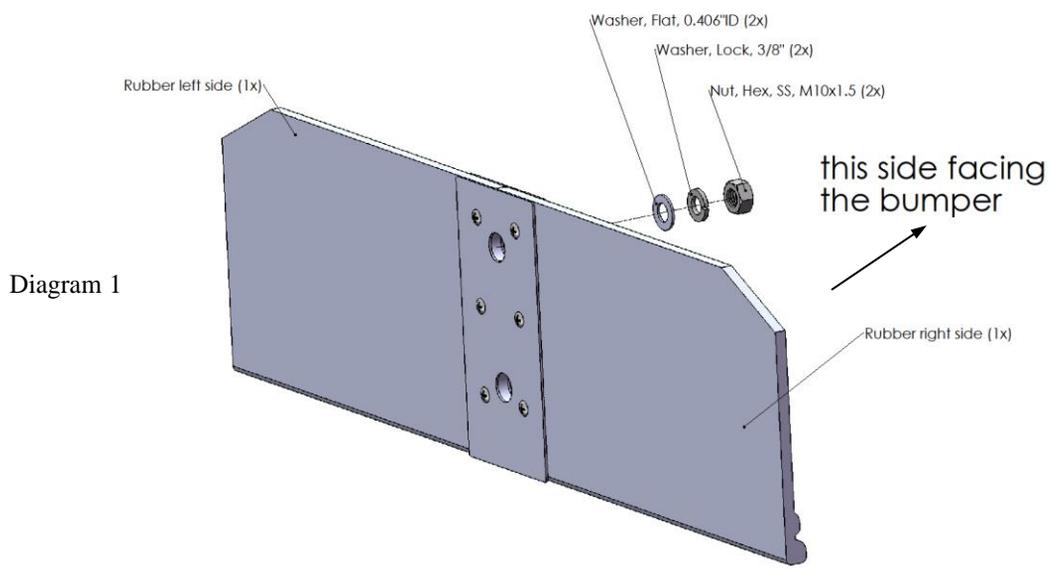

Position Guard between Bumper and Frame. Place the assembled Guard at the two OEM Factory Bolts (do not remove the existing OEM nuts, place guard in front of the OEM nuts), which are holding the frame for the Bumper. See pic 1. Install guard with washer/lock washer/hex nut and tighten them up.

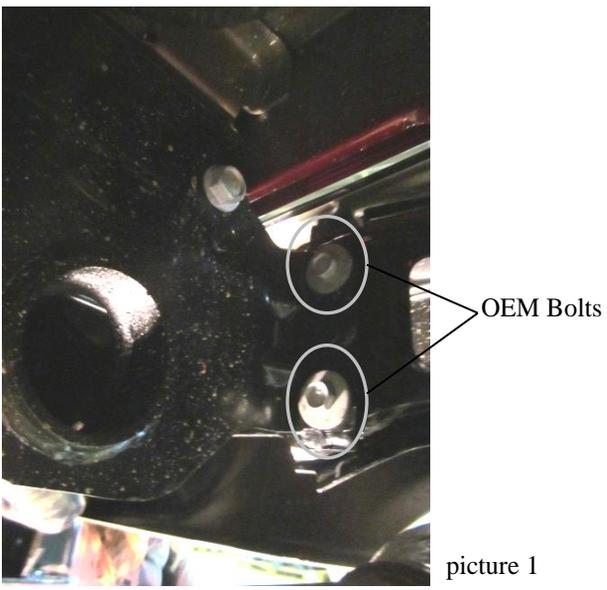

picture 1

<b><u>PARTS LIST #701494</u></b>	
(2) Rubber left side	xxxxxx
(2) Rubber right side	xxxxxx
(12) Screw, #8-32	#016031
(12) Nut with Washer, #8-32	#026001
(4) Nut, Hex, M10	#025019
(4) Washer, Flat,	#018013
(4) Washer, Lock M10	#024006
<b><u>Stainless Steel Parts</u></b>	
(2) Mount Front Side	#701488
(2) Mount Back Side	#701489

**NOTE: Inspect all bolts, ensure that they are tight!  
Inspect occasionally to ensure that they remain tight.**