

I-2136

LEXUS GX 470

LEXUS LX 470

LEXUS LX 570

TOYOTA 4RUNNER

TOYOTA LANDCRUISER

TOYOTA SEQUOIA


TOYOTA TACOMA

TOYOTA TUNDRA

ELECTRIC BRAKE CONTROL
ADAPTER HARNESS

ARNÉS DEL ADAPTADOR DEL CONTROL
DEL FRENO ELÉCTRICO.

FAISCEAU D'ADAPTATEUR DE COMMANDE
DE FREIN ÉLECTRIQUE

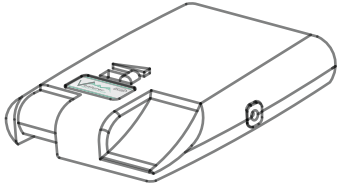

MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement fileté.

10/22/2010

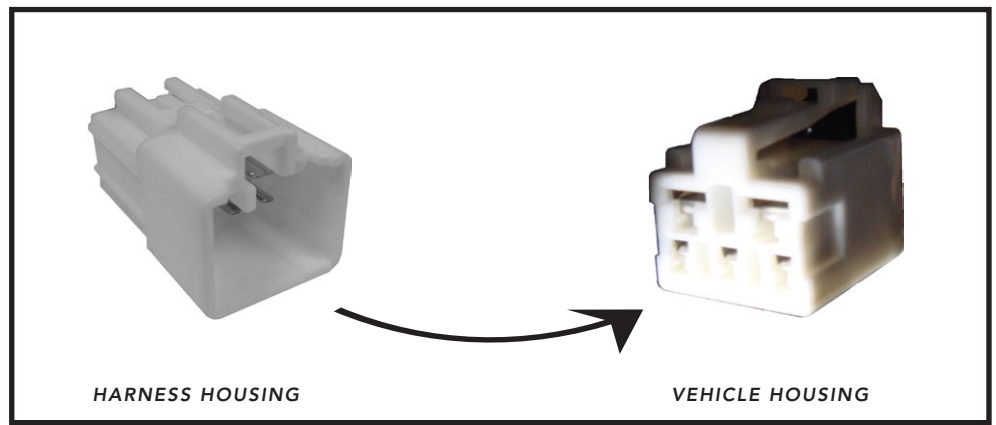

English

1. Locate the vehicle's electric brake control harness. The harness will be located underneath and left of the steering column, taped to another harness near the emergency brake pedal. There will be a 5-pin connector that mates with the one on the adapter.
2. Plug the brake control adapter into the vehicle's electric brake control connector.
3. Plug the remaining connector into your Curt brake control.
4. Complete the installation per the electric brake control manufacturer's instructions and mount the unit as directed. Perform test procedures as instructed.