 ©2001 Reese Products, Inc. 3-27-02

FRONT MOUNTED RECEIVER INSTALLATION INSTRUCTIONS

VEHICLE	HITCH NO.
DODGE RAM 1500	13538

EQUIPMENT REQUIRED:
DRILL BITS:
HITCH REQUIRES 5/8" PIN AND CLIP IF STABILIZING PIN IS NOT INSTALLED.
WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 3/4"

CARGO CAPACITY – DO NOT EXCEED 500 LB. OR VEHICLE FRONT GROSS AXLE WEIGHT RATING. (GAWR)

9000	LB. MAX. WINCH LINE PULL

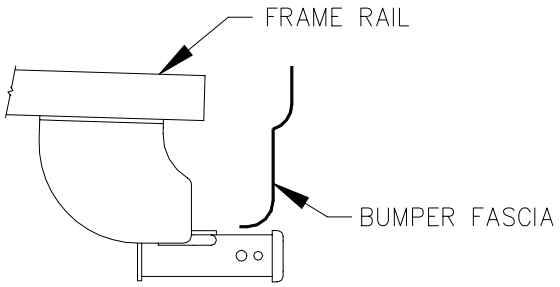

RECEIVER SHOWN IN PROPER POSITION

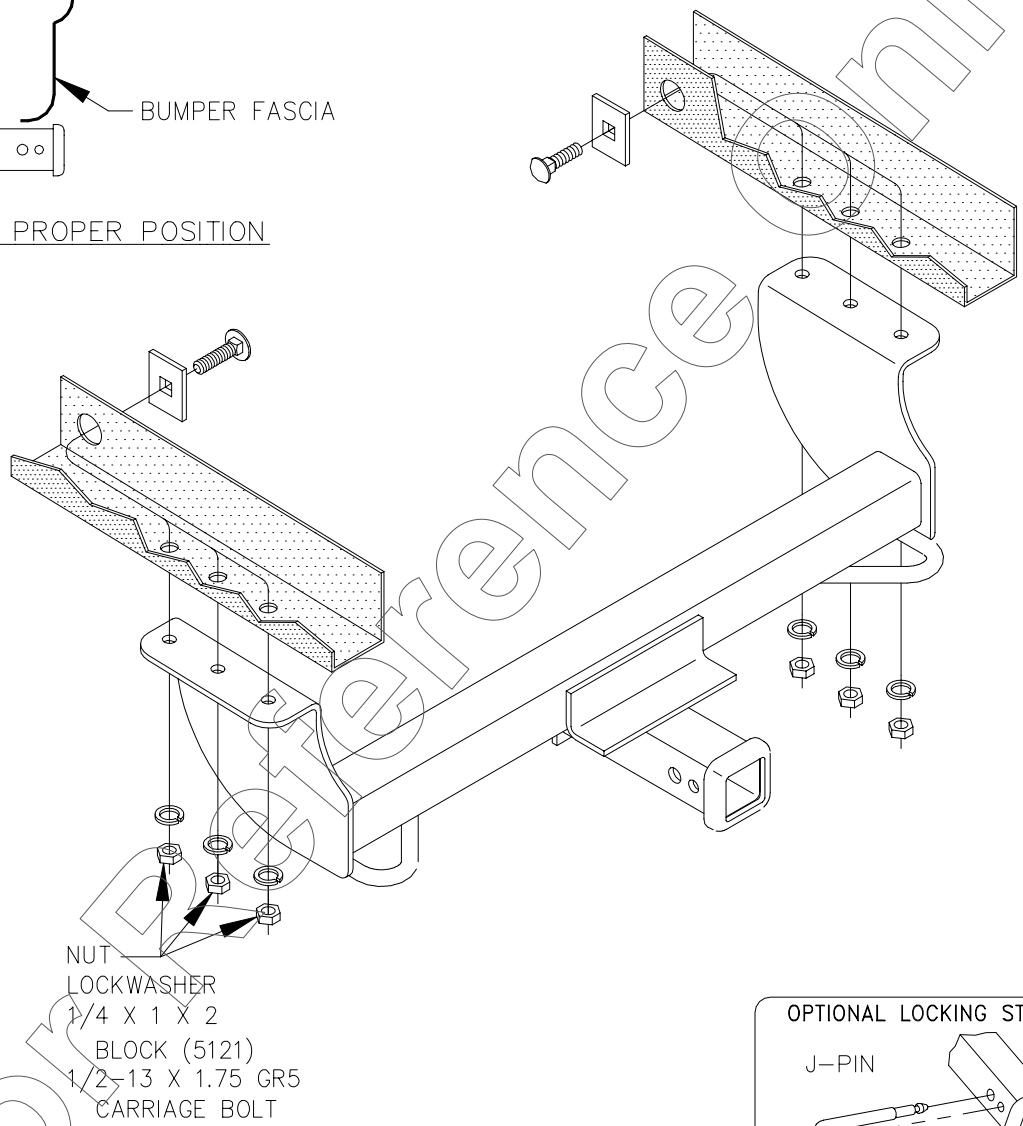

OPTIONAL LOCKING STABILIZING PIN

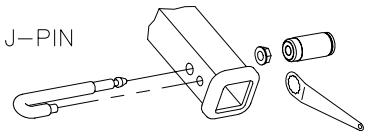

(Order Separately)

1. FISHWIRE BLOCKS AND CARRIAGE BOLTS THRU ACCESS HOLE INTO POSITION.
2. RAISE RECEIVER INTO POSITION AND INSTALL LOCKWASHERS AND HEX NUTS.

TIGHTEN ALL 1/2 GR5 FASTENERS TO 75 LB-FT.

APPROX WEIGHT: 34 LB. / 15.4 KG

NOTE: Check receiver frequently, making sure all fasteners are properly tightened. A receiver which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection.

WARNING: DO NOT CUT ACCESS OR ATTACHMENT HOLES WITH A TORCH. DO NOT CUT, WELD, OR MODIFY RECEIVER.

Reese Products, INC.
Elkhart, IN.
Oakville, ONT. Canada
www.reeseprod.com

For Reference Only